

 


SONY[®]

3-065-579-11 (2)

Video Cassette Recorder

Operating Instructions



SLV-EZ715AS/NZ Hi-Fi
SLV-EZ111AZ

© 2001 Sony Corporation



WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

The mains lead must only be changed at a qualified service shop.

Precautions

Safety

- This unit operates on 220-240 V AC, 50 Hz. Check that the unit's operating voltage is identical with your local power supply.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- The unit is not disconnected from the mains as long as it is connected to the mains, even if the unit itself has been turned off.
- Unplug the unit from the mains if you do not intend to use it for an extended period of time. To disconnect the lead, pull it out by the plug, never by the lead.

Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about four hours before operating the unit.

Caution

Television programmes, films, video tapes and other materials may be copyrighted.

Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmitter and/or programme owner.

Compatible colour systems

- This VCR is designed to record and play back using the PAL (B/G) colour system. Recording of video sources based on other colour systems cannot be guaranteed.
- Tapes recorded with NTSC colour system can be played back on this VCR using a TV or a colour monitor for PAL colour system.





Table of contents

Getting Started

- 4 Step 1 : Unpacking
- 5 Step 2 : Setting up the remote commander
- 6 Step 3 : Connecting the VCR
- 8 Step 4 : Tuning your TV to the VCR
- 10 Step 5 : Setting the clock
- 12 Presetting channels

Getting Started

Basic Operations

- 18 Playing a tape
- 21 Recording TV programmes
- 24 Recording TV programmes using the Easy Timer function
- 30 Setting the timer manually

Search Operations

- 32 Searching for the beginning of an Easy Timer recorded programme
- 33 Searching for the current position on a tape
- 34 Searching using the Blank Search function
- 35 Searching using the index function
- 37 Searching using the Time Search function

Additional Operations

- 38 Playing/searching at various speeds
- 39 Setting the recording duration time
- 40 Synchronised recording (SLV-EZ715AS/NZ only)
- 42 Checking/changing/cancelling timer settings
- 44 Recording stereo and bilingual programmes (SLV-EZ715AS/NZ only)
- 46 Adjusting the picture
- 47 Changing menu options
- 48 Editing with another VCR

Additional Information

- 50 Troubleshooting
- 53 Specifications
- 54 Index to parts and controls
- Back cover
- Index





 

Getting Started

Step 1


Unpacking

Check that you have received the following items with the VCR:

- Remote commander
- Aerial cable

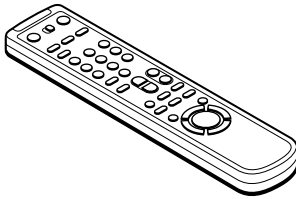

- R6 (size AA) batteries

 

Checking your model name

The instructions in this manual are for the three models: SLV-EZ715AS, EZ715NZ and EZ111AZ. Check your model name by looking at the rear panel of your VCR. The SLV-EZ715AS is the model used for illustration purposes. Any difference in operation is clearly indicated in the text, for example, "SLV-EZ111AZ only."






Step 2

Setting up the remote commander


Inserting the batteries


Insert two R6 (size AA) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

Insert the negative (-) end first, then push in and down until the positive (+) end clicks into position.

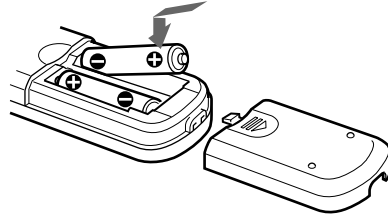

Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV. If the TV does not have the  symbol near the remote sensor, this remote commander will not operate the TV.

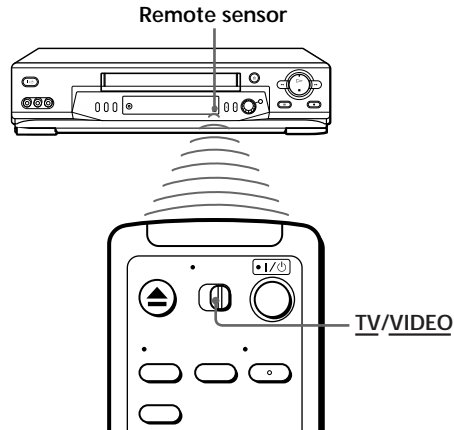

To operate	Set <u>TV/VIDEO</u> to
the VCR	<u>VIDEO</u> and point at the remote sensor on the VCR
a Sony TV	<u>TV</u> and point at the remote sensor on the TV

Notes

- The TV/VIDEO button selects the TV's input source (either aerial in or line in). The button does not control this VCR.
- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.






Step 3

Connecting the VCR


Connect the aerial to your VCR and TV as shown below to watch TV programmes and VCR pictures on your TV. In addition, if your TV has audio/video (A/V) input jacks, we recommend you connect the VCR to your TV using an audio/video cable to get a better picture and sound.

Connecting the aerial

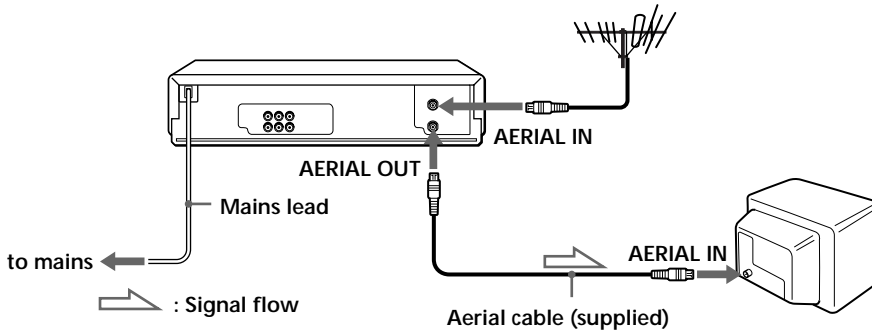


1

Disconnect the aerial cable from your TV and connect it to AERIAL IN on the rear panel of the VCR.

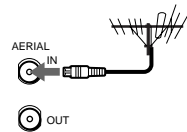

2

 Connect AERIAL OUT of the VCR and the aerial input of your TV using the supplied aerial cable.



3

Connect the mains lead to the mains.







Additional connections


To a TV that has audio/video input jacks

This additional connection improves picture and sound quality. Connect the TV as shown on the right.

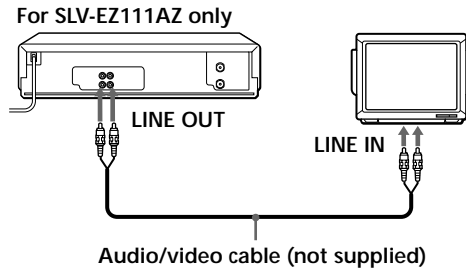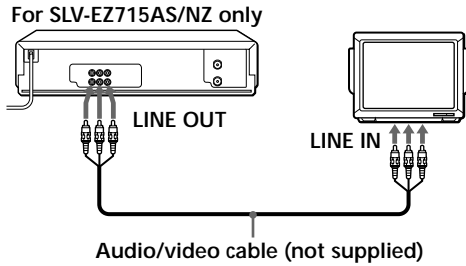

To a stereo system (SLV-EZ715AS /NZ only)

You can improve sound quality by connecting a stereo system as shown on the right.

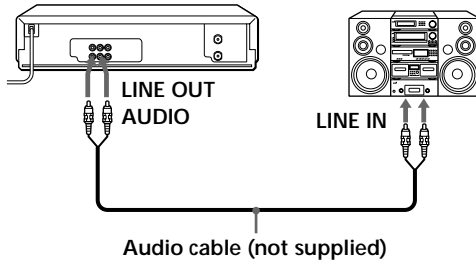

Note

- To play a tape in stereo, you must connect your VCR either to a TV with audio/video input jacks or to a stereo system.







Step 4

Tuning your TV to the VCR


If you have connected your VCR to the TV using the audio/video cable, skip this step.

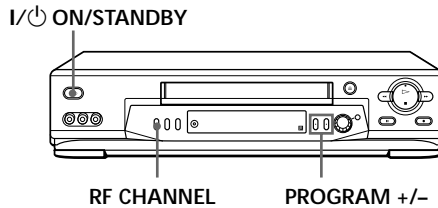


1  Press I/ON/STANDBY to turn on the VCR.

2  Press RF CHANNEL on the VCR.
 The factory-preset RF channel flashes in the display window for about three seconds (RF36 is for SLV-EZ715NZ, RF68 is for SLV-EZ715AS and 68 AUS is for SLV-EZ111AZ).
 Press RF CHANNEL again while the RF channel is flashing.
 The VCR signal is output through this channel to the TV.

  e.g. SLV-EZ715AS



3  (For SLV-EZ111AZ only)
 Press PROGRAM +/- to select the suitable RF channel, depending on the area you live in.

You can select Australia channels from 28 AUS to 69 AUS or New Zealand channels from 28 NZ to 69 NZ.

The Australia and New Zealand channels appear in the display window in alternate sequence.

4 Turn on your TV and select a programme position for the VCR picture.

This channel will now be referred to as the video channel.

Some TV has the programme position, such as "0", that is reserved for a VCR. In this case, select that programme position for the VCR picture. Refer to the instruction manual of your TV for details.





5

Tune the TV to the same channel as that shown in the display window so that the picture on the right appears on the TV screen.

Refer to your TV manual for tuning instructions.

If the picture does not appear clearly, see “To obtain a clear picture from the VCR” below.



6



Press RF CHANNEL.

You have now tuned your TV to the VCR. From now on, whenever you want to play a tape, set the TV to the video channel.

To obtain a clear picture from the VCR

If the picture does not appear clearly in step 5 above, press PROGRAM +/- in step 5 so that another RF channel appears. Then tune the TV to the new RF channel until a clear picture appears.

To set another RF channel number on the VCR, select a channel number that does not receive a broadcast signal in your area and is clear of interference from other channels.

If you cannot obtain a clear picture after performing this procedure, we recommend you connect the VCR and TV using an audio/video cable (see “To a TV that has audio/video input jacks” on page 7). If the same symptom persists, consult your nearest Sony dealer.






Step 5

Setting the clock


You must set the time and date on the VCR to be able to use the timer recording features properly.

Before you start...


- Turn on the VCR and the TV.
- Set the TV to the video channel.

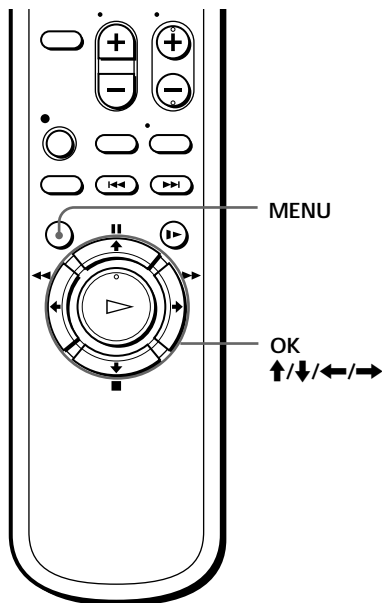

1

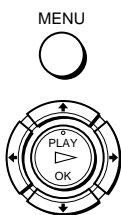


Press MENU, then press ↑/↓ to move the cursor (▶) to CLOCK SET and press OK.

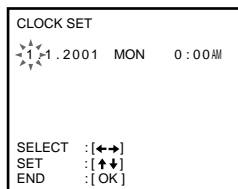

2




Press ↑/↓ to set the date.
The day of the week is set automatically.

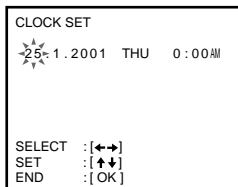

3



Press → to select the month and set the month using ↑/↓.

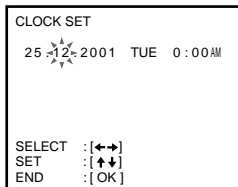




4



Set the year, hour and minute in sequence, using **→** to select the item to be set, and **↑/↓** to select the digits.

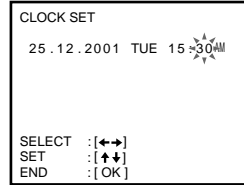

5



Press OK to start the clock.

Getting Started

Tip

- To change the digits when setting, press **←** to return to the item to be changed, and select the digits using **↑/↓**.

Note

- The menu disappears automatically if you do not proceed for more than a few minutes.







Presetting channels


First we recommend that you preset the receivable channels in your area using the One Touch Tuning function or the TUNER PRESET menu.

One Touch Tuning function or AUTO PRESET in the TUNER PRESET menu. Then, if some channels could not be preset automatically, preset them manually. If there are any unwanted channels among the preset ones, you can disable the channels.

Presetting all receivable channels using the One Touch Tuning function

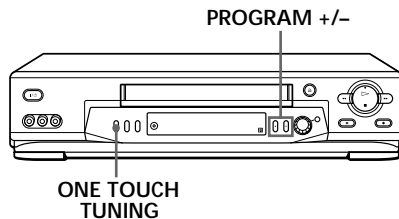

- 1**  **ONE TOUCH TUNING** Press and hold ONE TOUCH TUNING on the VCR for more than three seconds.

- 2**  **PROGRAM +/-** (For SLV-EZ111AZ only)
1 Press PROGRAM +/- on the VCR so that the indicator for your country (AUS or NZ) appears in the display window.



- 2** Press ONE TOUCH TUNING.



The VCR starts presetting the channels.



The WAIT indicator goes off when all the receivable channels are preset.

To check if the channels are preset correctly

Set the TV to the video channel and press PROGRAM +/- on the VCR. If the TV screen changes to a different programme each time you press PROGRAM +/-, the channels are preset correctly.

Tip

- To stop the One Touch Tuning function, press ONE TOUCH TUNING or ■ STOP on the VCR during the setting.






Presetting all receivable channels automatically


Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

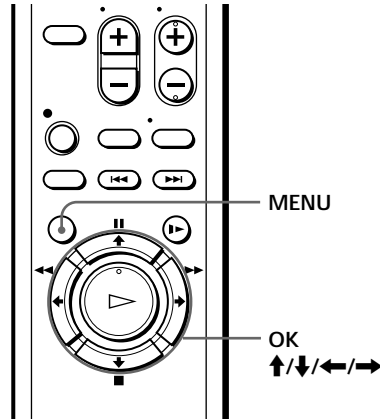

Getting Started

1

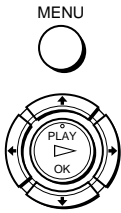

MENU

Press MENU, then press \uparrow/\downarrow to move the cursor (\blacktriangleright) to TUNER PRESET and press OK.

TUNER PRESET	PROG 1
NORMAL / CATV	•NORM CATV
AUTO PRESET	
\blacktriangleright CHANNEL SET	1
ADD / ERASE	•ADD ERASE
AFT	•ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

2



(For SLV-EZ111AZ only)

Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to COUNTRY, then select either AUS (Australia) or NZ (New Zealand), depending on the country you live in.

For SLV-EZ111AZ only

TUNER PRESET	PROG 1
\blacktriangleright COUNTRY	•AUS NZ
NORMAL / CATV	•NORM CATV
AUTO PRESET	
CHANNEL SET	1
ADD / ERASE	•ADD ERASE
AFT	•ON OFF
FINE TUNING	
SELECT	: [\uparrow/\downarrow]
SET	: [\leftarrow/\rightarrow]

3



Press \uparrow/\downarrow to move the cursor (\blacktriangleright) to AUTO PRESET, then press OK.

All receivable channels are preset in numerical sequence. When no more receivable channels can be found, presetting stops and the picture from the lowest numbered channel is displayed on the TV screen.

TUNER PRESET	PROG 0
NORMAL / CATV	•NORM CATV
\blacktriangleright AUTO PRESET	
CHANNEL SET	1
ADD / ERASE	•ADD ERASE
AFT	•ON OFF
FINE TUNING	
-*****- -PLEASE WAIT- -*****-	

continued

Getting Started | 13





Presetting channels (continued)

Note

- Picture might disappear for a few seconds during One Touch Tuning and auto presetting functions. This is for tuning procedure, and not a malfunction.







Presetting channels manually

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the video channel.

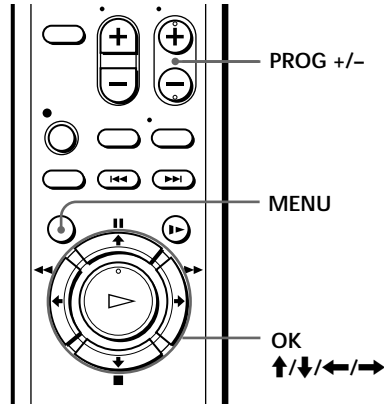


Getting Started

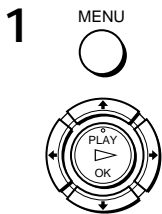

Press MENU, then press \uparrow/\downarrow to move the cursor (\blacktriangleright) to TUNER PRESET and press OK.

TUNER PRESET	PROG10
NORMAL / CATV	• NORM CATV
AUTO PRESET	• ADD ERASE
▶ CHANNEL SET	21
ADD / ERASE	• ON OFF
AFT	
FINE TUNING	
SELECT	: [$\uparrow\downarrow$]
SET	: [$\leftarrow\rightarrow$]

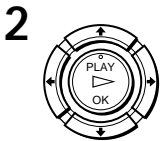


(For SLV-EZ111AZ only)

Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to COUNTRY, then select either AUS (Australia) or NZ (New Zealand), depending on the country you live in.


For SLV-EZ111AZ only

TUNER PRESET	PROG10
▶ COUNTRY	• AUS NZ
NORMAL / CATV	• NORM CATV
AUTO PRESET	
CHANNEL SET	21
ADD / ERASE	• ADD ERASE
AFT	• ON OFF
FINE TUNING	
SELECT	: [$\uparrow\downarrow$]
SET	: [$\leftarrow\rightarrow$]

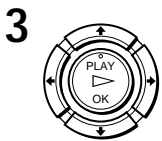

Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (\blacktriangleright) to NORMAL/CATV, then select NORM.
To preset CATV channels, select CATV.

TUNER PRESET	PROG10
▶ NORMAL / CATV	• NORM CATV
AUTO PRESET	
CHANNEL SET	21
ADD / ERASE	• ADD ERASE
AFT	• ON OFF
FINE TUNING	
SELECT	: [$\uparrow\downarrow$]
SET	: [$\leftarrow\rightarrow$]

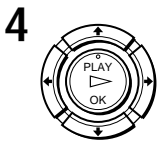

Press \uparrow/\downarrow to move the cursor (\blacktriangleright) to CHANNEL SET.

TUNER PRESET	PROG10
NORMAL / CATV	• NORM CATV
AUTO PRESET	
▶ CHANNEL SET	21
ADD / ERASE	• ADD ERASE
AFT	• ON OFF
FINE TUNING	
SELECT	: [$\uparrow\downarrow$]
SET	: [$\leftarrow\rightarrow$]

continued





Presetting channels (continued)

5



Press PROG +/- to select the programme position.

Selected programme position

TUNER PRESET	PROG13
NORMAL / CATV	•NORM CATV
AUTO PRESET	
▶CHANNEL SET	21
ADD / ERASE	•ADD ERASE
AFT	•ON OFF
FINE TUNING	
SELECT	: [↑↓]
SET	: [←→]

6



Press → repeatedly until the channel you want is displayed. Pressing ← goes back to the previous channels.

The channels are scanned in the following order:

TUNER PRESET	PROG14
NORMAL / CATV	•NORM CATV
AUTO PRESET	
▶CHANNEL SET	35
ADD / ERASE	•ADD ERASE
AFT	•ON OFF
FINE TUNING	
SELECT	: [↑↓]
SET	: [←→]

Channel coverage	For customers in Australia	For customers in New Zealand
VHF	AS0 to AS12, AS5A, AS9A	NZ1 to NZ11
UHF	AS28 to AS69	E21 to E69
CATV (TV distribution)	S1 to S41, S01 to S05	S1 to S41, S01 to S05

If you know the number of the channel you want, press the programme number buttons. For example, for channel 5, first press “0” and then press “5”. To set channel 5A or 9A, press → after pressing “0” and “5” or “0” and “9” (SLV-EZ715AS and SLV-EZ111AZ – when COUNTRY is set to AUS).

7

To allocate another channel to another programme position, repeat steps 5 and 6.

8



Press OK.





Disabling unwanted programme positions

After presetting channels, you can disable unused programme positions. The disabled positions will be skipped later when you press the PROG +/- buttons.


- 1 Press MENU, then press \uparrow/\downarrow to move the cursor (▶) to TUNER PRESET and press OK.
- 2 Press PROG +/- to select the programme position you want to skip.
- 3 Press $\uparrow/\downarrow/\leftarrow/\rightarrow$ to move the cursor (▶) to ADD/ERASE, then select ERASE.
- 4 Press OK.

If the picture is not clear

Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture is not clear, you may also use the manual tuning function.

- 1 Press PROG +/- to select the programme number for which you cannot obtain a clear picture.
- 2 Press MENU, then select TUNER PRESET and press OK.
- 3 Select FINE TUNING.

The fine tuning meter appears.

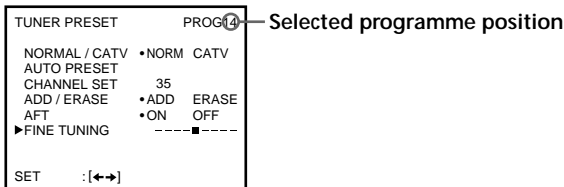

- 4 Press \leftarrow/\rightarrow to get a clearer picture, then press OK.

Note that the AFT (Auto Fine Tuning) setting switches to OFF.


Note

- The menu disappears automatically if you do not proceed for more than a few minutes.






Playing a tape

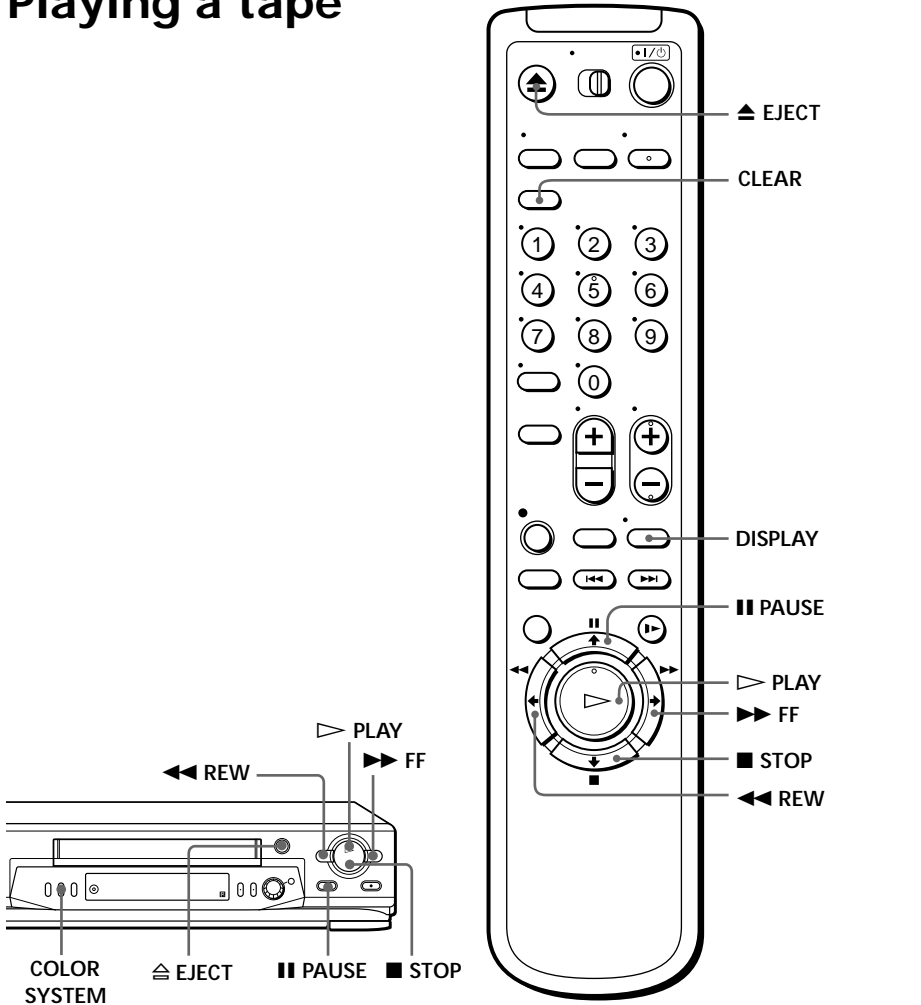

1 Turn on your TV and set it to the video channel.

 2 Insert a tape.
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.





3



Press ▷ PLAY.

When the tape reaches the end, it will rewind automatically.

Additional tasks

To	Press
Stop play	■ STOP
Pause play	▬ PAUSE
Resume play after pause	▬ PAUSE or ▷ PLAY
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	▲ EJECT

To set the colour system

If streaks appear during playback, press COLOR SYSTEM on the VCR to conform to the system that the tape was recorded in. (Normally, the colour system is correctly set whenever the tape is inserted.)

If your tape was recorded in	Press COLOR SYSTEM until the indication below appears in the display window
PAL	PAL
NTSC	NTSC

To play an NTSC-recorded tape

Set NTSC PB in the SET UP MENU according to the colour system of your TV. For details, see page 47.

If your TV is	Set NTSC PB to
PAL	PAL
NTSC 4.43	4.43

continued





Playing a tape (continued)

To use the time counter

At the point on the tape that you want to find later, press CLEAR. The counter in the display window resets to "0:00:00." Search for the point afterwards by referring to the counter.



To display the counter on the TV screen, press DISPLAY. Press DISPLAY again and the counter will disappear from the TV screen.


Notes

- The counter resets to "0:00:00" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.
- While setting the menu on the TV screen, you cannot use the \triangleright PLAY, \blacksquare PAUSE, \blacktriangleright FF, \blacktriangleleft REW or \blacksquare STOP buttons. These buttons are used for menu operations.
- If a tape has portions recorded in both PAL and NTSC systems, the time counter reading will not be correct. This is due to the difference between the counting cycles of the two colour systems.
- Depending on your TV, the following may occur while playing an NTSC-recorded tape:
 - the picture is black and white
 - the picture shakes
 - no picture appears on the TV screen
 - black streaks appear horizontally on the TV screen
 - the colour density increases or decreases.
- Tapes recorded in the LP mode of other NTSC system VCRs can be played back on this VCR, but the picture quality cannot be guaranteed.






Recording TV programmes

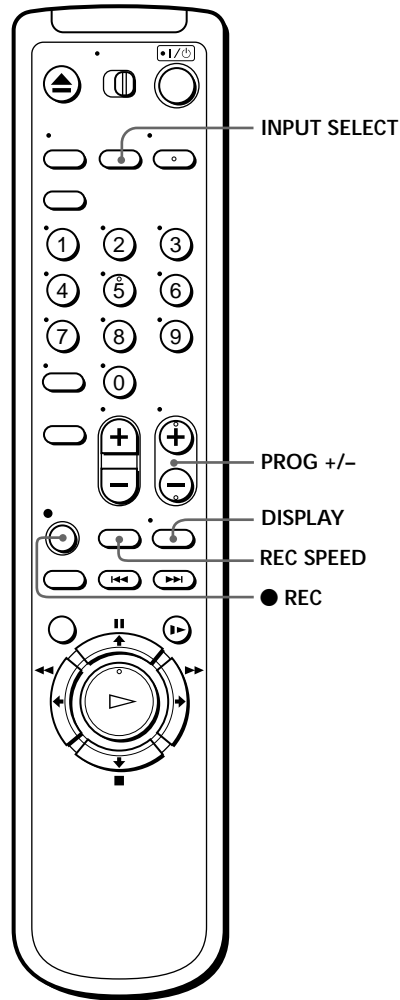

1 Turn on your TV and set it to the video channel.

2 Insert a tape with its safety tab in place.

 3 Press PROG +/- to select the programme position you want to record.



continued





 
Recording TV programmes (continued)

4 REC SPEED



Press REC SPEED to select the tape speed, SP or LP.

LP (Long Play) provides recording time twice as long as SP (Standard Play), however, SP produces better picture and audio quality.



5

 
● REC



Press ● REC to start recording.

The recording indicator lights up red in the display window.

Recording indicator




To stop recording

Press ■ STOP.

To check the remaining tape length

Press DISPLAY. The white bar indicates the approximate length of tape remaining.

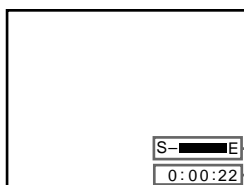

S—E Remaining tape length

0:00:22 Time counter

To watch another TV programme while recording


- 1** If the TV is connected to the VCR using an audio/video cable, set the TV to TV input. If the TV is connected to the VCR using only the aerial cable, skip this step.
- 2** Select another programme position on the TV.





To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on the tape again, cover the tab hole with adhesive tape.

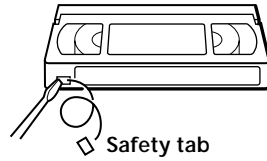

Tips

- To select a programme position, you can use the programme number buttons on the remote commander. For two-digit numbers, press the --- (ten's digit) button followed by the programme number buttons.
- You can select a video source from the LINE-1 IN or LINE-2 IN (SLV-EZ715AS/NZ only) jacks. Press INPUT SELECT or PROG +/- to display "L1" or "L2" (SLV-EZ715AS/NZ only) in the display window.
- The display appears on the TV screen indicating information about the tape, but the information will not be recorded on the tape.
- If you do not want to watch TV while recording, you can turn off the TV.
- You can have the VCR stop recording automatically after starting at a specified time. For details, see "Setting the recording duration time" on page 39.

Notes

- The display does not appear during still (pause) mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining tape length after you press DISPLAY.







Recording TV programmes using the Easy Timer function

The Easy Timer function allows you to make a timer recording of a programme without turning on your TV. Set the recording timer to record only one programme that will be broadcast within the next 24 hours using the Easy Timer knob. If the VCR clock has not been set, you can also set the clock before setting the timer recording.

Setting the Easy Timer

Before you start...

- Insert a tape with its safety tab in place. Make sure the tape is longer than the recording time.

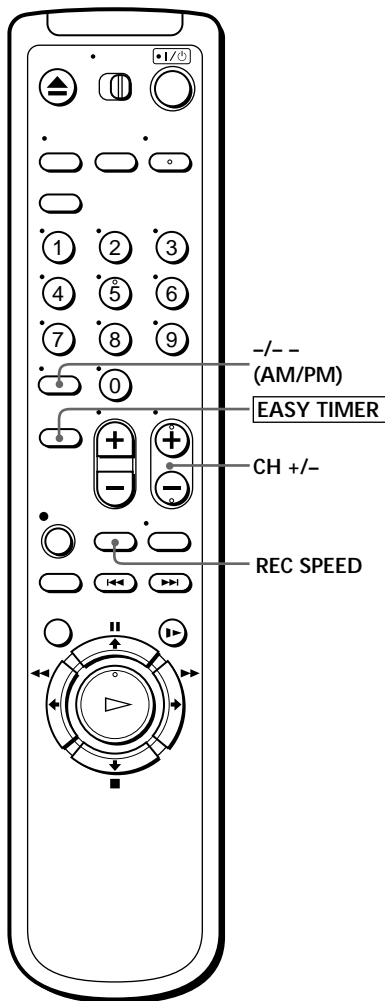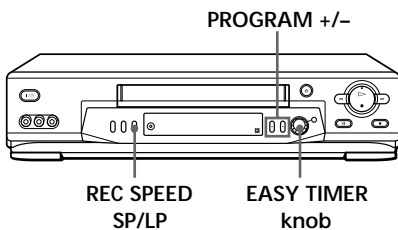

1

EASY TIMER



Push the EASY TIMER knob.

The START indicator appears in the display window.

If the clock has not been set, “-:- -” appears. Go to step 2 in “Setting or changing the Easy Clock” on page 26.





2



EASY TIMER

Set the recording start time by turning the EASY TIMER knob clockwise or counterclockwise to increase or decrease the time by 15 minutes.

To increase or decrease the time by one minute, press PROGRAM +/-.

Press -/-- (AM/PM) to change AM and PM.



 
3



EASY TIMER

Push the EASY TIMER knob to confirm the start time setting.

The STOP indicator appears.



4



EASY TIMER

Set the recording stop time in the same way as in step 2, then push the EASY TIMER knob.

A programme number flashes.



5

 


EASY TIMER

Turn the EASY TIMER knob clockwise or counterclockwise to select the programme you want to record.

To select the tape speed, press REC SPEED.

REC SPEED
SP/LP




6



EASY TIMER

Push the EASY TIMER knob to confirm the setting.

 The ⏻ indicator appears in the display window and the VCR stands by for recording.



continued

 





Recording TV programmes using the Easy Timer function (continued)

Setting or changing the Easy Clock

When “-:-” is displayed in the display window, the VCR clock has not been set. You need to set the clock using the Easy Clock function before setting the timer. You can also change the current time using the Easy Clock function.




EASY TIMER knob

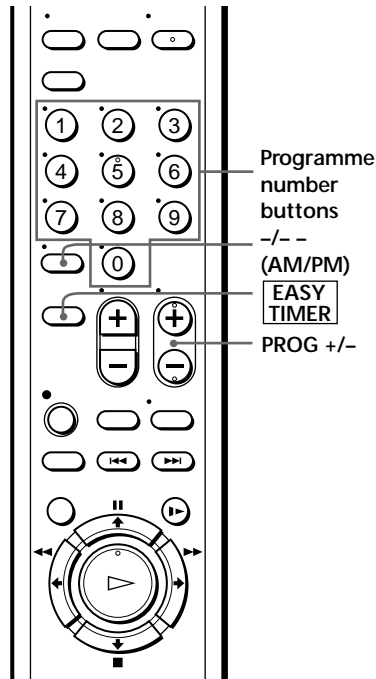

- When “-:-” is displayed in the display window, push the EASY TIMER knob.
- To change the clock setting, push and hold the EASY TIMER knob on the VCR for more than three seconds.

 
The CLOCK indicator and the current clock setting appear in the display window.



Set the current time using the EASY TIMER knob.

- 1 Turn the EASY TIMER knob clockwise or counterclockwise to enter the current hour.
- 2 Push the EASY TIMER knob to confirm the hour setting.
- 3 Turn the EASY TIMER knob to increase or decrease the minutes setting by a minute at a time.

 Press -/-- (AM/PM) to change AM and PM.





3

EASY TIMER

 


Push the EASY TIMER knob to finish setting the clock.

The VCR enters the timer recording setting mode.

To continue the Easy Timer setting, go to step 2 in “Setting the Easy Timer” on page 25.



To quit the Easy Timer setting mode without changing any settings, push the EASY TIMER knob repeatedly until the  indicator appears in the display window.

To set the timer and clock setting using the remote commander

You can also use the remote commander to set the Easy Timer and Easy Clock. The operations on the VCR and the remote commander correspond as follows:

To	Do this on the VCR	Do this on the remote commander
Confirm the setting and go to the next setting	Push the EASY TIMER knob	Press EASY TIMER
Change the time by 15 minutes (in START/STOP mode)	Turn the EASY TIMER knob or hold PROGRAM +/- down	Hold PROG +/- down
Change the time by one minute (in START/STOP mode)	Press PROGRAM +/-	Press PROG +/-
Select the programme	Turn the EASY TIMER knob or press PROGRAM +/-	Press PROG +/- or INPUT SELECT
Change the hour/minute by one hour/minute (in CLOCK mode)	Turn the EASY TIMER knob or press PROGRAM +/-	Press PROG +/-

You can also use the programme number buttons to set the clock, start and stop times, and the programme you want to record. Just press the programme number buttons to enter the hours and minutes. For example:

- To set the clock to “8:20”, press 0, 8, **EASY TIMER**, 2, 0 and **EASY TIMER** in sequence.
- To set the start or stop time to “8:20”, press 0, 8, 2, 0 and **EASY TIMER** in sequence.

If you make a mistake, re-enter the correct digits before pressing **EASY TIMER**.

continued





Recording TV programmes using the Easy Timer function (continued)

To stop recording

To stop the VCR while recording, press ■ STOP.

To check or change the timer setting

Push the EASY TIMER knob repeatedly until the setting you want to check or change flashes. Then re-enter the new setting, if necessary. If you do not want to change any of the settings, push the EASY TIMER knob repeatedly until the ☺ indicator appears in the display window.

You can also change the timer setting using the TIMER SET/CHECK menu. For details, see page 42.

To cancel the timer setting

To cancel the Easy Timer setting while entering a setting, press CLEAR on the remote commander or press PROGRAM + and - on the VCR at the same time.

To use the VCR after setting the timer

To use the VCR before a timer recording begins, just press I/⏻. The ☺ indicator turns off and the VCR switches on. Remember to press I/⏻ to reset the VCR to the timer recording standby mode after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV programme.

To watch the recorded programme right after recording with the Easy Timer

The SEARCH MODE indicator starts flashing when the VCR finishes the Easy Timer recording. To watch the recorded programme, push the EASY TIMER knob. The VCR turns on, starts searching, then automatically starts playback from the beginning of the recording. For details, see page 32.





Tip

- To record from a source connected to LINE-1 IN or LINE-2 IN (SLV-EZ715AS/NZ only) jacks, press INPUT SELECT or PROG +/- or turn the EASY TIMER knob to display "L1" or "L2" (SLV-EZ715AS/NZ only) in the display window.

Notes

- You cannot set the Easy Timer if eight programmes have already been set.
- You can set the timer for only one programme using the Easy Timer function. If you want to set the timer for other programmes, use the TIMER SET/CHECK menu. For details, see page 30.
- You cannot set the date using the Easy Timer function. Set the date using the CLOCK SET menu if you want to set the timer with the menu. For details, see page 10.
- The ⌚ indicator flashes in the display window when you complete the setting with no tape inserted.






Setting the timer manually

You can preset up to eight programmes at a time.

Before you start...

- Check that the VCR clock is set to the correct time.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.
- Turn on your TV and set it to the video channel.

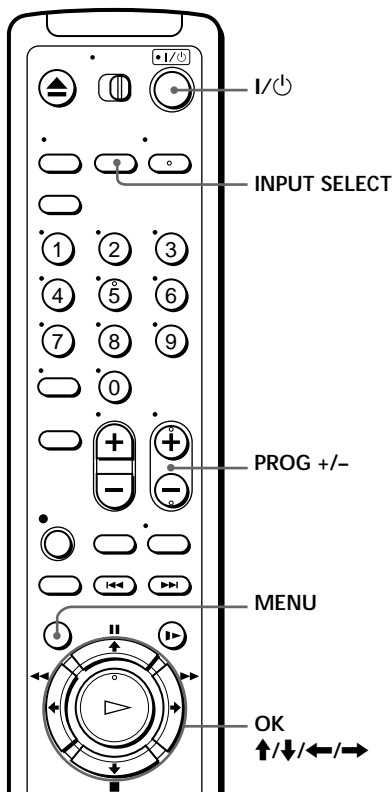

Press MENU and select **TIMER SET / CHECK**, then press OK.



TIMER SET / CHECK	25 . 12 TUE
DATE	START STOP PROG
▶---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---



Set the date, start and stop times, programme position, and tape speed:

- 1 Press **→** to select each item in turn.
 - 2 Press **↑/↓** to set each item.
- To correct a setting, press **←** to return to that setting and reset it.

TIMER SET / CHECK	25 . 12 TUE
DATE	START STOP PROG
▶---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---
---	---

To record the same programme every day or the same day every week, press **↓** while the date is flashing. For details, see “Daily/weekly recording” on page 31.





To record from a source connected to the LINE-1 IN or LINE-2 IN (SLV-EZ715AS/NZ only) jacks, press INPUT SELECT or PROG +/- to display “L1” or “L2” (SLV-EZ715AS/NZ only) in the “PROG” position.

3



Press → to confirm the setting.

The cursor (▶) appears at the beginning of the line. To enter another setting, move the cursor to the next line and repeat step 2.

4



Press OK.

5



Press I/⏻ to turn off the VCR.

The ⏻ indicator appears in the display window and the VCR stands by for recording.

To record from other equipment, leave the connected equipment switched on.

To stop recording

To stop the VCR while recording, press ■ STOP.

Daily/weekly recording

In step 2 above, press ↓ to select the recording pattern. Each time you press ↓, the indication changes as shown below. Press ↑ to change the indication in reverse order.

the current date → SUN-SAT (Sunday to Saturday) → MON-SAT (Monday to Saturday) → MON-FRI (Monday to Friday) → EVERY SAT..... → EVERY MON → EVERY SUN → 1 month later → (dates count down) → the current date

Tips

- To set the programme position, you can also use the PROG +/- or programme number buttons.
- To set the tape speed, you can also use the REC SPEED button.

Note


- The ⏻ indicator flashes in the display window when you press I/⏻ with no tape inserted.





Searching for the beginning of an Easy Timer recorded programme

If you record a programme using the Easy Timer function, you can easily find the beginning of the recording with the SEARCH MODE function. The SEARCH MODE indicator flashes when the VCR finishes making an Easy Timer recording.

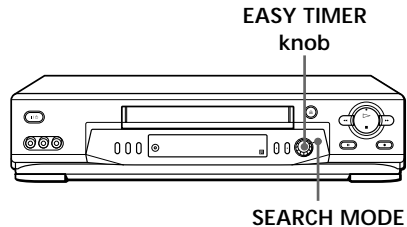


Push the EASY TIMER knob.

The VCR turns on, rewinds to the beginning of the recorded programme and starts playback automatically. The SEARCH MODE indicator turns off.

Tip

- You can start the SEARCH MODE function after the flashing of the SEARCH MODE indicator has been stopped. The flashing stops when you turn on the VCR and press the SEARCH MODE button (Do not press any button at this point, otherwise this SEARCH MODE function will be cancelled). To start the SEARCH MODE function, press the SEARCH MODE button repeatedly until the SEARCH MODE indicator flashes. Push the EASY TIMER knob. The VCR rewinds and starts playback automatically.

 If you continue to press the SEARCH MODE button while the SEARCH MODE indicator is flashing, you can enter other search operations (For details, see the following pages). Each press of the SEARCH MODE button changes the search operations as follows:



Notes


- This SEARCH MODE function will be cancelled (the SEARCH MODE indicator turns off) if:
 - The VCR starts recording other programmes.
 - You press the ▷ PLAY, ►► FF, ◀◀ REW or ≡ EJECT button while the VCR is on.







Searching for the current position on a tape


This feature enables you to find the current position on a tape as well as the remaining time of the tape.

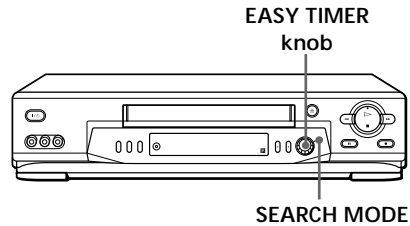

  - 1 Press SEARCH MODE repeatedly until the REMAIN indicator appears in the display window as shown on the right.
The SEARCH MODE indicator lights up.




- 2 Push the EASY TIMER knob to display the tape meter on the TV screen.
The SEARCH MODE indicator turns off.
A cursor (■) indicates the current position on the tape.

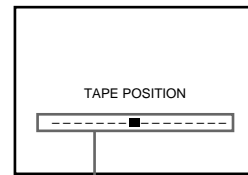

Tape meter

 “REMAIN” and the remaining time of the tape appear in the display window in the following order:



To stop the Search function

Press ■ STOP.

Notes


- To display the remaining time correctly, you may have to select the TAPE LENGTH in the SET UP MENU according to the type of the tape that you are using. For details, see page 47.
- In step 2, the VCR automatically rewinds and fast-forwards the tape only if you press the SEARCH MODE button right after you insert a tape. This is so that the VCR can measure the current position on the tape.
- You cannot use this function during any recording mode.






Searching using the Blank Search function



This feature enables you to find a blank section on your tape.

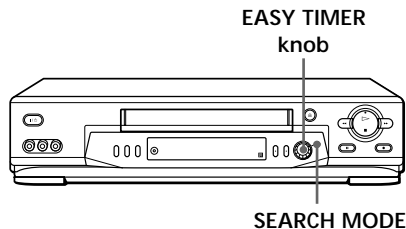

 - 1 Press SEARCH MODE repeatedly until the BLANK indicator appears in the display window.
The SEARCH MODE indicator lights up.



  - 2 Push the EASY TIMER knob on the VCR.
The SEARCH MODE indicator turns off. The VCR fast-forwards to the end of the tape. Then, the VCR rewinds the tape to the last recorded programme. After a few seconds, the VCR starts playback and stops at the beginning of the blank section.




“BLANK” and the remaining time of the blank section appear alternately in the display window for about one minute.

To stop searching

To stop the VCR while searching for a blank section, press ■ STOP.

Notes


- To display the remaining time correctly, you may have to select the TAPE LENGTH in the SET UP MENU according to the type of the tape that you are using. For details, see page 47.
- In step 2, “FULL” will appear in the display window for about one minute, if:
 - there is no blank section available on the tape.
 - the remaining time of a blank section is less than one minute.
- The VCR can only detect the blank section between the end of the tape and the end of the last recorded programme.

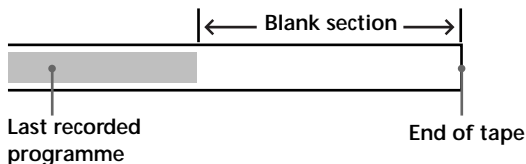



Searching using the index function


The VCR marks the tape with an index signal at the point where each recording begins. Use these signals as references to find a specific recording. The VCR can search up to 99 index signals ahead of or behind the current position. You can either use the INDEX SEARCH buttons on the remote commander or the SEARCH MODE button and EASY TIMER knob on the VCR.

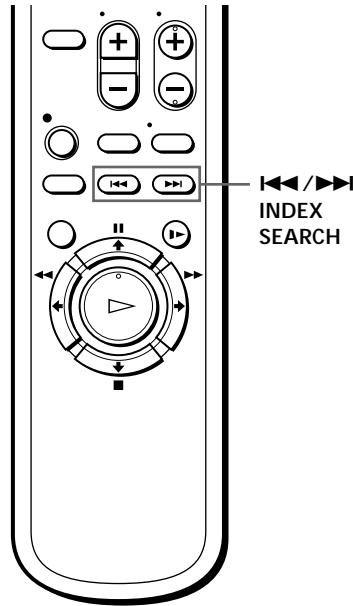

Using the INDEX SEARCH buttons on the remote commander

- 1 Insert an indexed tape into the VCR.
- 2 Press ◀◀/▶▶ INDEX SEARCH repeatedly to specify how many index signals ahead or behind you want to search:
 - To search ahead, press ▶▶ INDEX SEARCH.
 - To search backwards, press ◀◀ INDEX SEARCH.

The VCR starts searching and the index number on the TV screen counts down to zero. Playback starts from the point about five seconds ahead of the specified index mark.

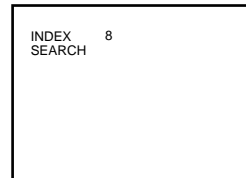


continued






Searching using the index function (continued)


Using the SEARCH MODE button and EASY TIMER knob on the VCR

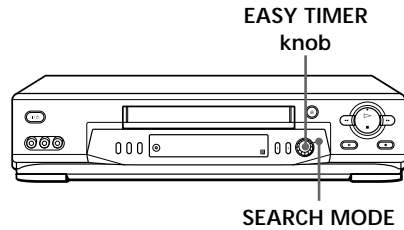

 - 1 Press SEARCH MODE on the VCR repeatedly until "INDEX" appears in the display window (the SEARCH MODE indicator lights up).



 - 2 Turn the EASY TIMER knob to specify how many index signals ahead or behind you want to search:
 - To search ahead, turn the EASY TIMER knob clockwise.
 - To search backwards, turn the EASY TIMER knob counterclockwise.



- 3 Push the EASY TIMER knob.
The VCR starts searching. Playback starts (the SEARCH MODE indicator turns off) from the point about five seconds ahead of the specified index mark.

To stop searching

Press ■ STOP.

Note


- No index signal will be added when recording starts from recording pause. However, an index signal will be marked if you change the channel during recording pause.






Searching using the Time Search function

You can easily find a specific point on a tape by using the Time Search function. For example, you can find a recorded section 15 minutes ahead of or behind the current position of a tape by using the Time Search function.

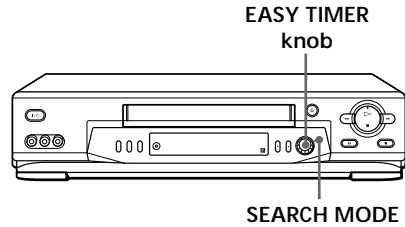

 - 1 Press SEARCH MODE repeatedly until "TIME" appears in the display window (the SEARCH MODE indicator lights up).



- 2 Turn the EASY TIMER knob clockwise or counterclockwise to set the length of time you want the VCR to fast-forward or rewind the tape. Each turn on the knob increases or decreases the duration by 15 minutes.

 
For example, if you want to watch a recorded section 15 minutes ahead of the current position, turn the EASY TIMER knob once clockwise.

To change the time by one minute, press PROGRAM +/-.



- 3 Push the EASY TIMER knob.

The VCR starts searching and the tape counter starts counting until it reaches the specified point.



The VCR starts playback automatically when the tape counter reaches the specified point (the SEARCH MODE indicator turns off).

To stop searching

Press ■ STOP.

Tip



- The VCR can search up to three hours ahead of or behind the current position of a tape.





Additional Operations

Playing/searching at various speeds

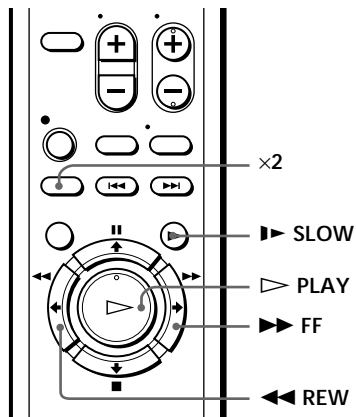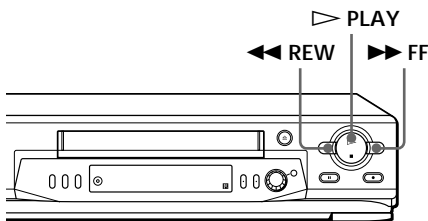

Playback options	Operation
View the picture during fast-forward or rewind	During fast-forward, hold down ►► FF. During rewind, hold down ◀◀ REW.
Play at high speed	<ul style="list-style-type: none"> During playback, press ►► FF or ◀◀ REW <u>on the remote commander</u>. During playback, hold down ►► FF or ◀◀ REW. When you release the button, normal playback resumes.
Play at twice the normal speed	During playback or pause, press ×2.
Play in slow motion	During playback or pause, press ► SLOW.
Play frame by frame	During pause, press ►► FF or ◀◀ REW <u>on the remote commander</u> . Hold down the button to play one frame each second.
Rewind and start play	While the tape is stopped, hold down ◀◀ REW <u>on the VCR</u> and press ▷ PLAY <u>on the VCR</u> .

To resume normal playback

Press ▷ PLAY.

Tips

- Adjust the picture using TRACKING +/- on the VCR if:
 - streaks appear while playing in slow motion.
 - the picture shakes during pause.
 To set tracking to the centre position, press both buttons (+/-) at the same time.
- If noise appears during pause or frame-by-frame playback, first switch to the slow motion playback, then adjust the picture using TRACKING +/- on the VCR.

Notes


- The playback sound is muted during these operations.
- In LP or EP mode, noise may appear or there may be no colour.
- The picture may show noise when playing at high speed in reverse.
- On-screen symbols may shake while playing or searching at various speeds.





Setting the recording duration time

After you have started recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

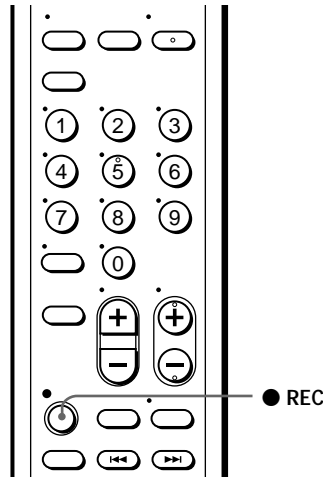


- 1 While recording, press ● REC.

The ⏸ indicator appears in the display window.



- 2 Press ● REC repeatedly to set the duration.

 Each press advances the time in increments of 30 minutes.



The tape counter decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

To extend the duration

Press ● REC repeatedly to set to the new duration.

To cancel the duration

Press ● REC repeatedly until the ⏸ indicator turns off and the VCR returns to normal recording mode.

To stop recording

To stop the VCR while recording, press ■ STOP.






Synchronised recording (SLV-EZ715AS/ NZ only)

The Synchronised Recording feature enables you to record from the connected equipment such as a satellite tuner, or a cable TV decoder that has a timer function. Once you set the timer on the other equipment, the VCR will start recording the programme synchronised with the timer.


Connections necessary to use this function

Connect the other equipment to the LINE-1 IN jacks of this VCR.

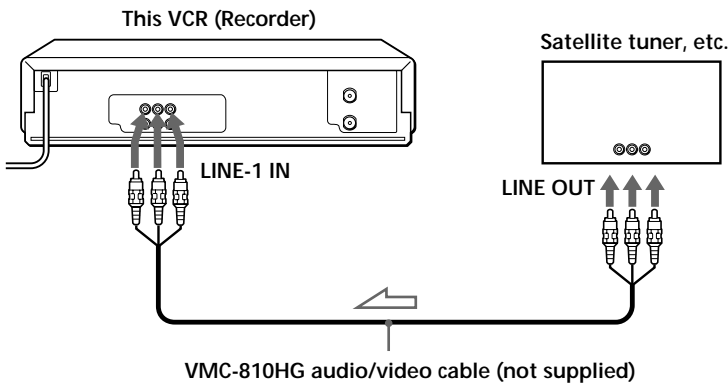

: Signal flow

How to make a Synchronised recording

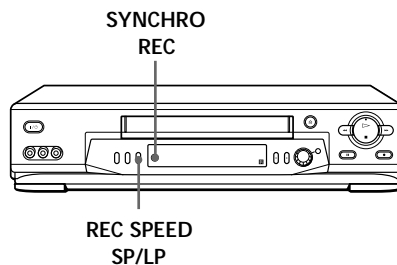

- 1 Press INPUT SELECT or PROG +/- on the remote commander to display "L1" in the display window.
- 2 Set the timer on the equipment to the time of the programme you want to record, then turn it off.
- 3 Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.





- 4 Press REC SPEED to select the tape speed.
- 5 Hold down SYNCHRO REC for more than two seconds.

The SYNCHRO REC button lights up and the VCR stands by for recording.

The VCR automatically turns on and starts recording when it receives video/audio signals from the connected equipment.

To cancel the Synchronised recording

Press SYNCHRO REC so that the button's light turns off.

To stop recording

Press ■ STOP while recording.

The VCR automatically stops recording when the tape reaches the end or when the other equipment stops transmitting the video/audio signals.

Notes

- Some equipment automatically turn off in a certain amount of time if you do not operate it after it turns on with the timer. In this case the Synchronised Recording also stops automatically.
- The Synchronised Recording starts and stops according to the signals from the connected equipment. Refer also to the instruction manual of the connected equipment for information about its timer function.
- Some equipment keeps transmitting signals even though the power is off. In this case, the Synchronised Recording feature does not work because the VCR will not be able to know when to start recording. To record the programme, set the timer on the VCR. If you use a satellite tuner or a cable TV decoder, make sure to turn it on. For details, see "Setting the timer manually" (page 30).
- If the settings for timer recording and Synchronised Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished.






Checking/ changing/ cancelling timer settings

Before you start...

- Turn on your TV and set it to the video channel.

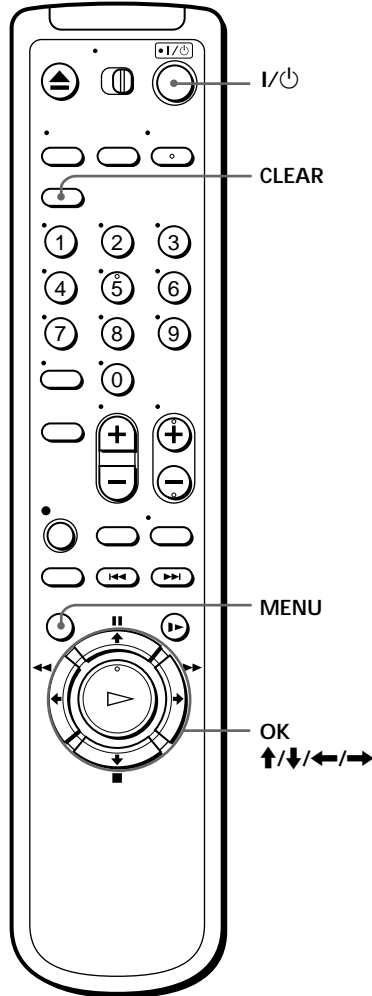

- 1 Press I/Power to turn on the VCR.
- 2 Press MENU, then select TIMER SET/CHECK and press OK:
 - If you want to change or cancel a setting, go on to the next step.
 - If you do not need to change or cancel the settings, press OK, then turn off the VCR to return to recording standby.

TIMER SET / CHECK	25.12	TUE	
DATE	START	STOP	PROG
▶ 6.1SUN	7:00AM	8:00AM	6 SP
8.1TUE	10:30PM	11:15PM	50 LP
MON-SAT	1:00PM	3:00PM	27 LP
EVERY SUN	11:55AM	1:30PM	L2 SP
--	--	--	--
--	--	--	--
--	--	--	--
--	--	--	--






- 3** Press **↑/↓** to select the setting you want to change or cancel:
 - To change the setting, press **←/→** to select the item you want to change, and press **↑/↓** to reset it. Then, press **→** repeatedly until the cursor (▶) appears at the beginning of the line.
 - To cancel the setting, press **CLEAR**.
- 4** Press **OK**.

If any timer settings remain, turn off the VCR to return to recording standby.

When the timer settings overlap

The programme that starts first has priority and the second programme starts recording only after the first programme has finished. If the programmes start at the same time, the programme listed first in the menu has priority.

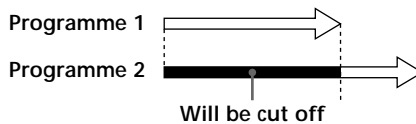



Recording stereo and bilingual programmes (SLV-EZ715AS/NZ only)

In the ZWEITON (German stereo) system

This VCR automatically receives and records stereo and bilingual programmes based on the ZWEITON system. When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To select bilingual sound while recording

Press AUDIO MONITOR to select the sound you want.

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO

In the NICAM system (For SLV-EZ715NZ only)

This VCR receives and records stereo and bilingual programmes based on the NICAM system (the NICAM indicator appears). When a stereo or bilingual programme is received, the STEREO indicator appears in the display window.

To record a NICAM programme, HIFI AUDIO in the SET UP MENU should be set to NICAM (initial setting). To check the menu setting, see page 47 for details.

To select the sound while recording

Press AUDIO MONITOR to select the sound you want.

Stereo programme

To listen to	On-screen display	Display window
Stereo	STEREO	STEREO
Standard sound*	No indicator	No indicator

* Usually the mixed sound of left and right channels (monaural)

Bilingual programme

To listen to	On-screen display	Display window
Main	MAIN	STEREO
Sub	SUB	STEREO
Main and sub	MAIN/SUB	STEREO
Standard sound*	No indicator	No indicator

* Usually the main sound (monaural)






Selecting the sound during playback

Press **AUDIO MONITOR** to select the sound you want.

To listen to	On-screen display	Display window
Stereo/main and sub (left and right channels)	STEREO	STEREO
Left channel/main	L CH	STEREO
Right channel/sub	R CH	STEREO
Standard sound	No indicator	No indicator

How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

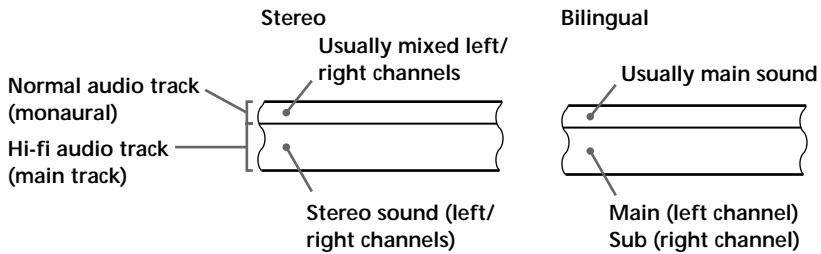

Notes


- To play a tape in stereo, you must use the **AUDIO OUT** connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the **AUDIO MONITOR** setting.
- If the **AUDIO MONITOR** button does not function, check that **AUDIO MIX** in the **SET UP MENU** is set to **OFF**.
- (For **SLV-EZ715NZ** only)
If **HIFI AUDIO** is set to **STD**, the standard sound will be recorded on both the hi-fi and normal audio tracks. Pressing **AUDIO MONITOR** will not change the sound.




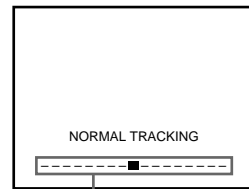


Adjusting the picture

Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the  indicator flashes in the display window, then turns off), distortion may occur if the tape was recorded in poor condition. If so, manually adjust the tracking.

Press TRACKING +/- buttons on the VCR to display the tracking meter. The distortion should disappear as you press one of the two buttons. (The  indicator lights up.) To resume automatic tracking adjustment, eject the tape and reinsert it.




Tracking meter

About the Adaptive Picture Control (APC) function

The Adaptive Picture Control (APC) function automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the SET UP MENU (The APC indicator lights up in the display window).

e.g. SLV-EZ715NZ only

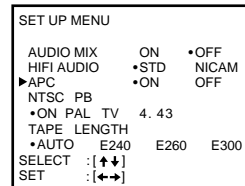

APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

APC recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

 


To deactivate the APC function

Press MENU and select SET UP MENU, then set APC to OFF. The APC indicator in the display window turns off.

Tip

- To set the tracking to the centre position, press the TRACKING + and - buttons at the same time.

Note

- There is a delay of a few seconds before the VCR actually starts recording while the VCR analyses the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press  REC to have the VCR analyse the tape (the APC indicator flashes rapidly). After the APC indicator stops flashing, press  PAUSE to start recording immediately. If you press  PAUSE before the APC indicator stops flashing, the APC function is cancelled.






Changing menu options

- 1 Press MENU, then select SET UP MENU.

e.g. SLV-EZ715NZ only

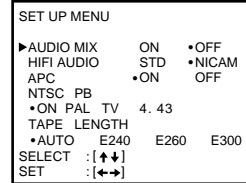

- 2 Press **↑/↓** to select the option to change, then press **←/→** to change the setting.
- 3 Press OK to return to the original screen.

Menu choices

Initial settings are indicated in bold print.

Menu option	Set this option to
AUDIO MIX	ON to listen to the hi-fi and normal audio tracks at the same time. The AUDIO MONITOR button will not function. OFF to listen to hi-fi and normal audio tracks separately. Select the sound using the AUDIO MONITOR button.
HIFI AUDIO (For SLV-EZ715NZ only)	STD to record standard sound on the hi-fi audio track. NICAM to record NICAM broadcasts on the hi-fi audio track. For details, see page 44.
APC	ON to switch on the APC (Adaptive Picture Control) function and improve picture quality. OFF to switch off APC.
NTSC PB	ON PAL TV to play back an NTSC-recorded tape on a PAL TV. 4.43 to play back an NTSC-recorded tape on an NTSC TV. For details, see page 19.
TAPE LENGTH	AUTO to have the VCR automatically select the tape length. For E240, E260 or E300 tapes, set it according to the tape type that you are using to display the remaining time correctly.

Note

- You may not be able to display the remaining time correctly for an NTSC tape using the TAPE LENGTH menu.






Editing with another VCR

How to connect to record on this VCR

e.g. SLV-EZ715AS/NZ

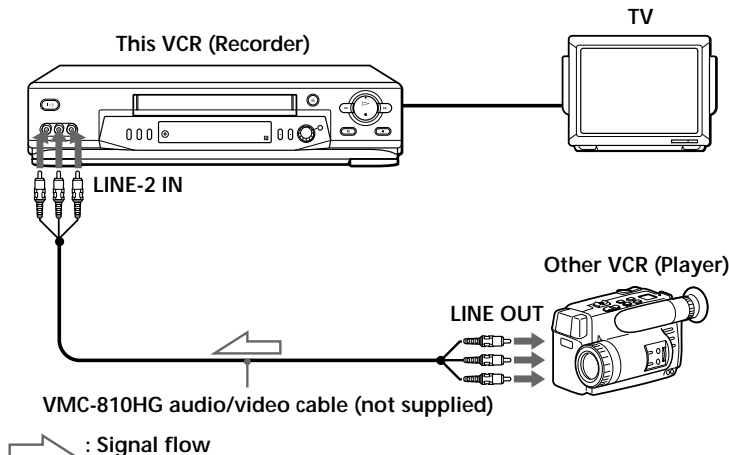

How to connect to a stereo system (for SLV-EZ715AS/NZ only)

Connect LINE-2 IN AUDIO on this VCR to the audio output jacks on the stereo system, using the RK-C510HG audio cable (not supplied).

Tips

- (For SLV-EZ111AZ only)
Connect LINE-1 IN on this VCR to the line output jacks on the other VCR using a commercially available audio/video cable such as Sony VMC-710HG/721HG (not supplied). If the other VCR has the AUDIO L and R jacks, use a Sony VMC-910HG audio/video cable (not supplied).
- (For SLV-EZ715AS/NZ only)
You can also use the LINE-1 IN jack instead. If the other VCR is a monaural type, the sound is recorded only on the channel whose jack is connected to the audio plug. To record on both right and left channels, connect the audio plugs to the AUDIO R/L jacks using a VMC-910HG audio/video cable (not supplied).

Notes

- If you connect this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.
- Make sure you connect the plugs to the jacks of the same colour.






Operation

(when recording on this VCR)

Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT or PROG +/- to display “L1” or “L2” in the display window.
- Press REC SPEED to select the tape speed (SP or LP).

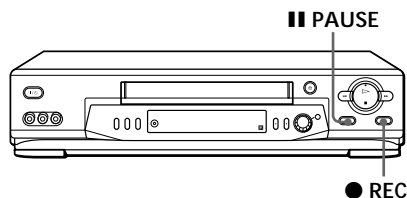

- 1 Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2 Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press **|| PAUSE**.
- 3 Press **● REC** on this VCR and set it to recording pause.
- 4 To start editing, press the **|| PAUSE** buttons on both VCRs at the same time.

To stop editing

Press the **■ STOP** buttons on both VCRs.

Tips

- To edit more precisely, press the **|| PAUSE** buttons on the VCRs to release pause.
- To cut out unwanted scenes while editing, press **|| PAUSE** on this VCR when an unwanted scene begins. When it ends, press **|| PAUSE** again to resume recording.

Note

- If you start recording following the procedure above, the VCR will not start recording with the APC function. To record a tape with the APC function, press **● REC** again during recording pause in step 3 so that the VCR analyses the tape. Then when you start recording in step 4, press **|| PAUSE** after the APC indicator stops flashing. If you press **|| PAUSE** before the APC indicator stops flashing, the APC function is cancelled.





Troubleshooting

If you have any questions or problems not covered below, please consult your nearest Sony service facility.

	Symptom	Remedy
Power	The I/⏻ ON/STANDBY switch does not function.	<ul style="list-style-type: none"> • Connect the mains lead to the mains securely.
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> • Moisture condensation has occurred. Turn the power off, unplug the mains lead and leave the VCR to dry for over four hours.
Clock	The clock has stopped and “-:-” lights up in the display window.	<ul style="list-style-type: none"> • The clock stops if the VCR is disconnected from the mains for more than eight hours. Reset the clock (and timer).
	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. • If you made connections using the aerial cable only, make sure the RF channel number is set correctly for your area.
Playback	The picture or sound is distorted.	<ul style="list-style-type: none"> • Adjust the tracking with the TRACKING +/- buttons. • Make sure the colour system is correctly set to the system that the tape was recorded in.
	The picture is not clear, or a message appears indicating that the video heads need cleaning.	<ul style="list-style-type: none"> • The video heads are dirty (see page 52). Clean the video heads using the Sony T-25CLD, T-25CLW or E-25CLDR video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available liquid type cleaning cassette other than Sony's, as they may damage the video heads. • If a message appears, this indicates that the Head Condition Sensor has detected dirty video heads. Follow the on-screen message. For details about the Head Condition Sensor, see page 52. • The video heads may have to be replaced. Consult your local Sony service facility for more information.
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> • Adjust the vertical hold control on the TV or monitor.
	The picture has no sound.	<ul style="list-style-type: none"> • The tape is defective. • If you made A/V connections, check the audio cable connection.
	The sound is unstable or has an echo. (For SLV-EZ715AS/NZ only)	<ul style="list-style-type: none"> • When you play a tape with the same sound recorded on both the hi-fi and normal sound tracks, make sure the AUDIO MIX option in the SET UP MENU is set to OFF.





	Symptom	Remedy
Recording	A TV programmes does not appear on the TV screen.	<ul style="list-style-type: none"> • Make sure the TV is set to the video channel. If you are using a monitor, set it to video input. • Select the correct source with the INPUT SELECT or PROG +/- buttons. Select a programme position when recording TV programmes; select "L1" or "L2" (SLV-EZ715AS/NZ only) when recording from other equipment.
	TV reception is poor.	<ul style="list-style-type: none"> • Adjust the TV aerial.
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> • The safety tab has been removed. To record on this tape, cover the tab hole.
	The tape is ejected when you press ● REC.	<ul style="list-style-type: none"> • Check that the safety tab has not been removed.
Timer recording	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> • Make sure the tape is not at its end.
	The timer does not operate.	<ul style="list-style-type: none"> • Check that the clock is set. • Make sure a tape has been inserted. • Check that the safety tab has not been removed. • Make sure the tape is not at its end. • Make sure a programme has been set for timer recording. • Make sure your timer settings are past the current time. • Check that the satellite tuner is turned on. • The clock stops if the VCR is disconnected from the mains for more than eight hours. Reset the clock and timer. • Turn the power off and unplug the mains lead.
	The SYNCHRO REC button turns off while recording or does not go back to recording standby mode.	<ul style="list-style-type: none"> • The tape has reached its end. Insert a new tape and press SYNCHRO REC again.
	The Synchronised Recording function does not work.	<ul style="list-style-type: none"> • The connected equipment was not turned off. Turn off the connected equipment and press SYNCHRO REC again. • There was a power failure. Press SYNCHRO REC again.
	The programme recorded with the Synchronised Recording function is incomplete.	<ul style="list-style-type: none"> • If the settings for timer recordings and Synchronised Recording overlap, the programme that starts first has priority and the second programme starts recording only after the first programme has finished. • There was a power failure. Press SYNCHRO REC again.

* Synchronised Recording feature is for SLV-EZ715AS/NZ only.

continued

Additional Information

51





Troubleshooting (continued)

Symptom	Remedy
A tape cannot be inserted.	<ul style="list-style-type: none"> Check that a tape is not already in the tape compartment.
The remote commander does not function.	<ul style="list-style-type: none"> Make sure you are pointing the remote commander at the remote sensor on the VCR. Replace all of the batteries in the remote commander with new ones if they are weak. Make sure the <u>TV/VIDEO</u> remote control switch is set correctly.
You cannot control other TVs.	<ul style="list-style-type: none"> Set your TV's code number. The code number resets to 01 when you replace the batteries of the remote commander.
The tracking meter does not appear on the screen.	<ul style="list-style-type: none"> The recording condition of the tape is very poor and tracking cannot be adjusted.
The VCR needs to be cleaned.	<ul style="list-style-type: none"> Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.

Others

 
Symptoms caused by contaminated video heads

• Normal picture

• Rough picture

• Unclear picture

• No picture (or black & white screen appears)



initial
contamination

terminal

Head Condition Sensor

The Head Condition Sensor checks the conditions of the video heads condition. If the heads are dirty, a message will instruct you to insert a video head cleaning cassette.

(For SLV-EZ715AS/NZ only)

The VCR may temporarily switch to a different head and resume playback. To switch the heads, press \triangleright PLAY while the "PUSH [PLAY] TO RESUME TEMPORARILY" message appears on the screen. Although playback will resume, the sound will be monaural. You may have to manually adjust the tracking to get a better picture (see "Adjusting the picture" on page 46). When playback is finished, be sure to clean the heads with a video head cleaning cassette.

Be sure to use the Sony T-25CLD, T-25CLW or E-25CLDR video head cleaning cassette. If these cleaning cassettes are not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required).





Specifications

System

Channel coverage

(SLV-EZ715AS and SLV-EZ111AZ
 – when COUNTRY is set to AUS)
 VHF AS0 to AS12, AS5A, AS9A
 UHF AS28 to AS69
 CATV S01 to S05, S1 to S41
 (SLV-EZ715NZ and SLV-EZ111AZ – when
 COUNTRY is set to NZ)
 VHF NZ1 to NZ11
 UHF E21 to E69
 CATV S01 to S05, S1 to S41

RF output signal

UHF channels:
 28 to 69 (SLV-EZ715AS and SLV-EZ111AZ)
 21 to 69 (SLV-EZ715NZ)

Aerial out

75-ohm asymmetrical aerial socket

Inputs and outputs

For SLV-EZ715AS/NZ only

LINE-1 IN or LINE-2 IN

VIDEO IN, phono jack (1 each)
 Input signal: 1 Vp-p, 75 ohms, unbalanced,
 sync negative
 AUDIO IN, phono jack (2 each)
 Input level: 327 mVrms
 Input impedance: more than 47 kilohms

LINE OUT

VIDEO OUT, phono jack (1)
 Output signal: 1 Vp-p, 75 ohms, unbalanced,
 sync negative
 AUDIO OUT, phono jack (2)
 Standard output: 327 mVrms
 Load impedance: 47 kilohms
 Output impedance: less than 10 kilohms

For SLV-EZ111AZ only

LINE-1 IN

VIDEO IN, phono jack (1)
 Input signal : 1 Vp-p, 75 ohms, unbalanced,
 sync negative
 AUDIO IN, phono jack (1)
 Input level : 327 m Vrms
 Input impedance : more than 47 kilohms

LINE OUT

VIDEO OUT, phono jack (1)
 Output signal : 1 Vp-p, 75 ohms, unbalanced,
 sync negative
 AUDIO OUT, phono jack (1)
 Standard output : 327 m Vrms
 Load impedance : 47 kilohms
 Output impedance : less than 10 kilohms

General

Power requirements

220 – 240 V AC, 50 Hz

Power consumption

16 W (SLV-EZ715AS/NZ)

13 W (SLV-EZ111AZ)

Operating temperature

5°C to 40°C

Storage temperature

–20°C to 60°C

Dimensions

Approx. 430 × 97 × 292 mm (w/h/d)
 including projecting parts and controls

Mass

Approx. 4.1 kg

Power back-up

Built-in self-charging capacitor
 Back-up duration: up to 8 hours at a time

Supplied accessories

Remote commander (1)
 R6 (size AA) batteries (2)
 Aerial cable (1)

Design and specifications are subject to change
 without notice.

ENERGY STAR® is a U.S. registered mark.

As an ENERGY STAR® Partner, Sony Corporation
 has determined that this product meets the
 ENERGY STAR® guidelines for energy efficiency.






Index to parts and controls

Refer to the pages indicated in parentheses () for details.

Front panel

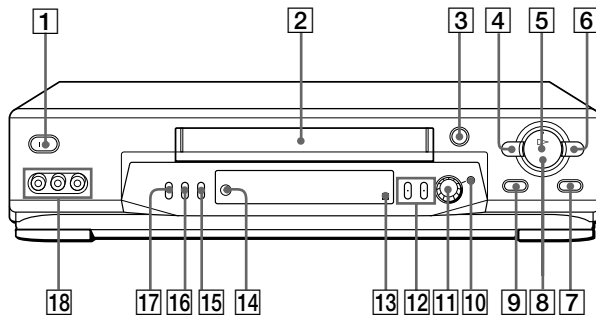


- | | |
|---|--|
| 1 I/⏻ ON/STANDBY switch (8) | 12 PROGRAM/TRACKING +/- buttons (8, 46) |
| 2 Tape compartment | 13 Remote sensor (5) |
| 3 ≡ EJECT button (19) | 14 (For SLV-EZ715AS/NZ only) SYNCHRO REC button (54) |
| 4 ◀ REW (rewind) button (19, 38) | 15 REC SPEED SP (Standard Play)/LP (Long Play) button (24, 25) |
| 5 ▷ PLAY button (19) | 16 COLOR SYSTEM button (19) |
| 6 ▶▶ FF (fast-forward) button (19, 38) | 17 ONE TOUCH TUNING/ RF (Radio Frequency) CHANNEL button (8, 12) |
| 7 ● REC (record) button (22) | 18 (For SLV-EZ715AS/NZ only) LINE-2 IN VIDEO/AUDIO L/R jacks (48) |
| 8 ■ STOP button (19) | |
| 9 PAUSE button (19) | |
| 10 SEARCH MODE button/indicator (32, 33, 34, 36, 37) | |
| 11 EASY TIMER knob (24, 32, 33, 34, 36, 37) | |





Display window

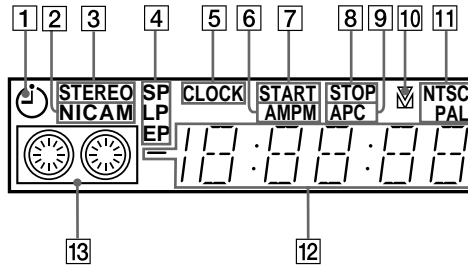

- | | | | |
|---|--|----|--|
| 1 | Timer indicator (25, 31) | 7 | START indicator (24) |
| 2 | (For SLV-EZ715NZ only)
NICAM indicator (44) | 8 | STOP indicator (24) |
| 3 | (For SLV-EZ715AS/NZ only)
STEREO indicator (44) | 9 | APC (Adaptive Picture Control)
indicator (46) |
| 4 | Tape speed indicator (25) | 10 | Tracking indicator (46) |
| 5 | CLOCK indicator (26) | 11 | Colour system indicator (19) |
| 6 | AM/PM indicator (24) | 12 | Time counter/line/programme/
clock indicator (20, 21, 26, 49) |
| | | 13 | Tape/recording indicator (22) |

continued


Additional Information | 55






Index to parts and controls (continued)

Rear panel (SLV-EZ715AS/NZ)

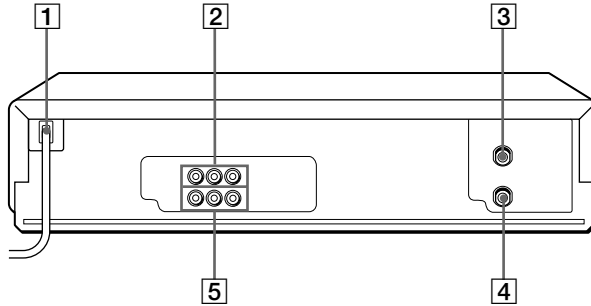

- | | |
|---|---|
| 1 Mains lead (6) | 4 AERIAL OUT connector (6) |
| 2 LINE-1 IN AUDIO R/L/VIDEO jacks (40, 48) | 5 LINE OUT AUDIO R/L/VIDEO jacks (7) |
| 3 AERIAL IN connector (6) | |

Rear panel (SLV-EZ111AZ)

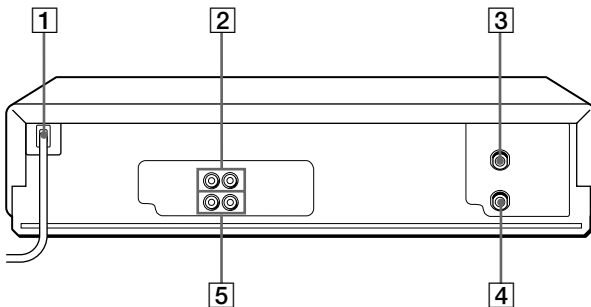


- | | |
|---|--|
| 1 Mains lead (6) | 4 AERIAL OUT connector (6) |
| 2 LINE-1 IN AUDIO/VIDEO jacks (48) | 5 LINE OUT AUDIO (MONO)/VIDEO jacks (7) |
| 3 AERIAL IN connector (6) | |





Remote commander

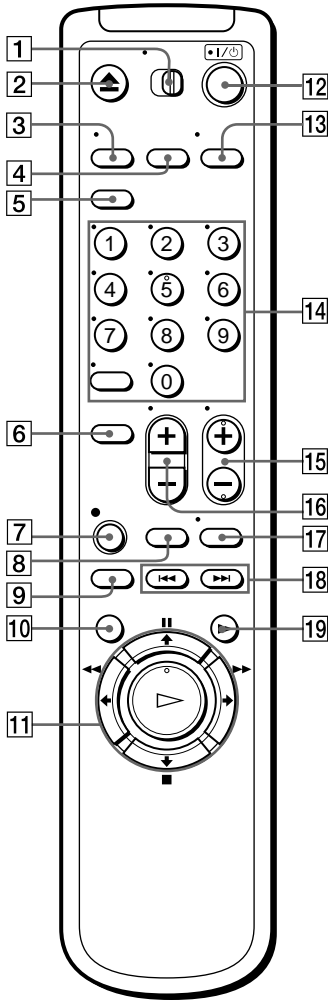

- 1 TV/VIDEO remote control switch (5)
- 2 ▲ EJECT button (19)
- 3 TV/VIDEO button (*for TV*) (5)
- 4 INPUT SELECT button (23, 31)
- 5 CLEAR button (20, 43)
- 6 EASY TIMER button (27)
- 7 ● REC button (22, 39)
- 8 REC SPEED button (22)
- 9 ×2 button (38)
- 10 MENU button (10, 46)
- 11 Tape/menu operation buttons
 - ▬ PAUSE/▲ button (19)
 - STOP/▼ button (19)
 - ◀◀ REW (rewind)/◀ button (19, 38)
 - ▶▶ FF (fast-forward)/▶ button (19, 38)
 - ▷ PLAY/OK button (19)
- 12 I/ON (on/standby) switch (31)
- 13 AUDIO MONITOR button (44)
(This button doesn't work for SLV-EZ111AZ)
- 14 Programme number /-/-- (ten's digit) /AM/PM buttons (23, 24, 26)
- 15 PROG (programme) +/- buttons (21)
- 16 VOL (volume) +/- buttons (*for TV*)
- 17 DISPLAY button (20, 22)
- 18 ◀◀ /▶▶ INDEX SEARCH buttons (35)
- 19 ▶ SLOW button (38)





Index

A

- Accessories supplied 4
- Adjusting
 - picture 17, 38, 46
 - tracking 38, 46
- Aerial hookup 6
- AFT (Auto Fine Tuning) 17
- APC (Adaptive Picture Control) 46
- Audio track 45
- A/V (audio/video) connection 7

B

- Blank Search 34

C

- Cancelling timer settings 42
- Changing timer settings 42
- Checking timer settings 42
- Cleaning the video heads 50
- Clock setting 10
- Colour system
 - compatible colour systems 2
 - setting 19
- Connecting
 - the VCR and your TV 6
 - to a stereo system 7
 - to a TV with audio/video jacks 7
- Counter 20

D

- Disabling programme position 17
- Dubbing. *See* Editing

E, F, G

- Easy Clock 26
- Easy Timer recording 24
- Editing 48
- EP mode 38

H

- Head Condition Sensor 52
- Hi-fi audio track 45

I, J, K

- Index
 - Search 35

L

- LP mode 20, 22

M

- Monitoring audio
 - during playback 45
 - during recording 44

N

- NICAM broadcasts 44
- Normal audio track 45
- NTSC-recorded tapes 19

O

- One Touch Tuning 12

P, Q

- Picture adjustment 17, 38
- Playback 18
 - at various speeds 38
 - frame-by-frame 38
 - slow motion 38
- Presetting channels
 - automatically 13
 - manually 15
- One Touch Tuning 12

R

- Recording 21
 - bilingual programmes 44
 - duration time 39
 - saving 23
 - stereo programmes 44
 - using the Easy Timer function 24
 - while watching another programme 22
- Remote commander 5

S

- Safety tab 23
- Searching
 - at various speeds 38
 - for the current position on a tape 33
 - the beginning of an Easy Timer recorded programme 32
 - using the Blank Search function 34
 - using the index function 35
 - using the Time Search function 37
- SP mode 22
- Synchronised recording 40

T, U, V, W, X, Y

- Time Search 37
- Timer recording 24
 - cancelling timer settings 42
 - changing timer settings 42
 - checking timer settings 42
 - daily/weekly recording 31
 - Easy Timer 24
 - overlapping timer recordings 43
- Tracking adjustment 38, 46
- Tuning your TV to the VCR 8

Z

- ZWEITON broadcasts 44