

FM/AM Clock Radio

 
ICF-C1iPMK2

Operating Instructions

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.


There is a tactile dot on the VOLUME +, ►/|| and PRESET TUNING 3 button.

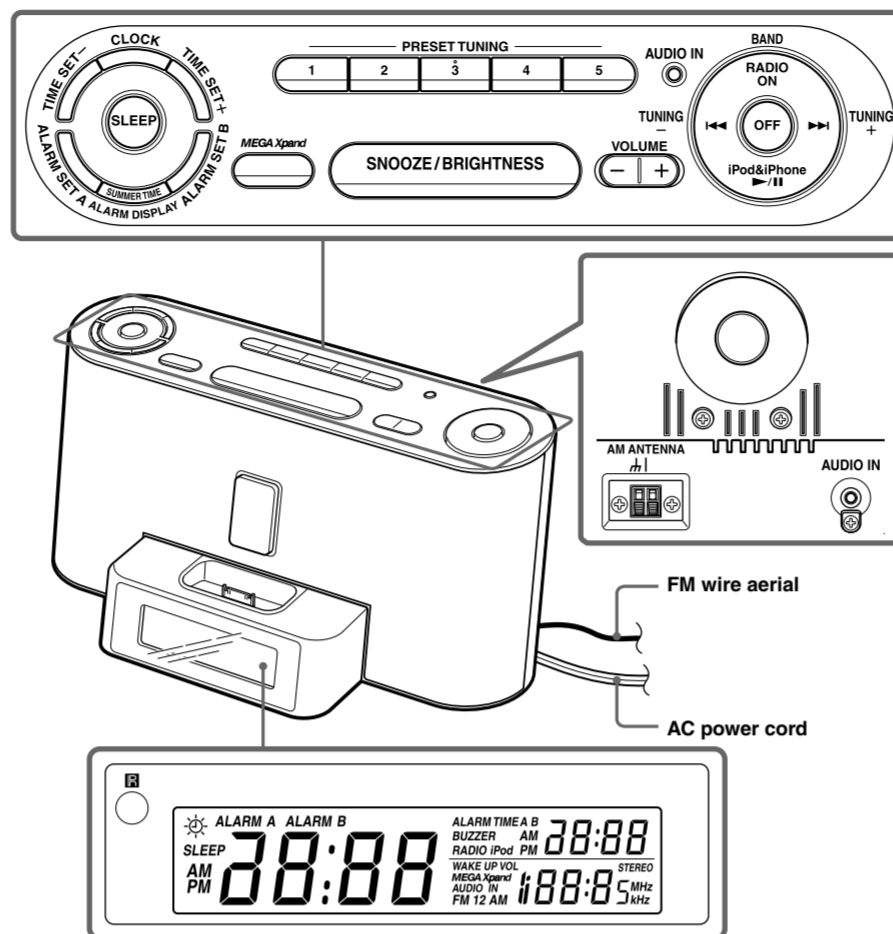


Display window (12-hour system)
The display differs depending on your country.



 
A

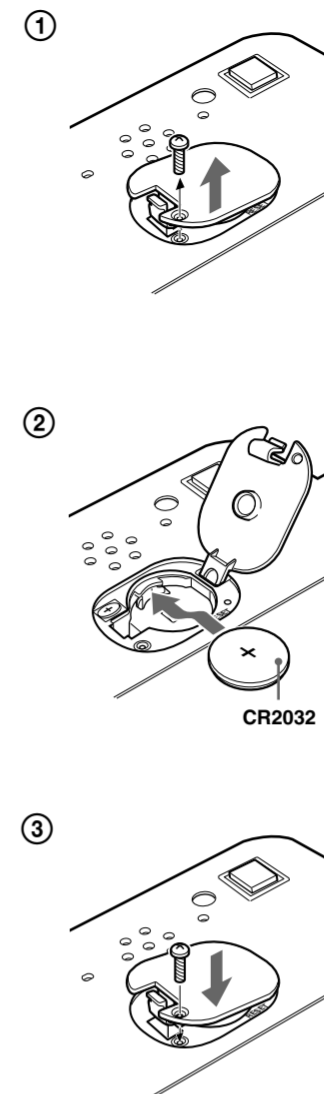

B

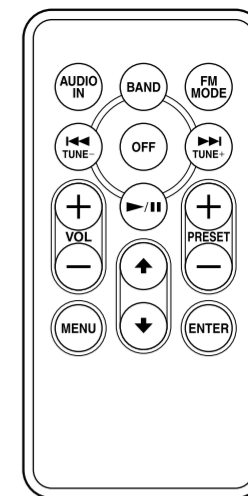 

There is a tactile dot on the VOL +, ►/||, ↑ and PRESET + button.

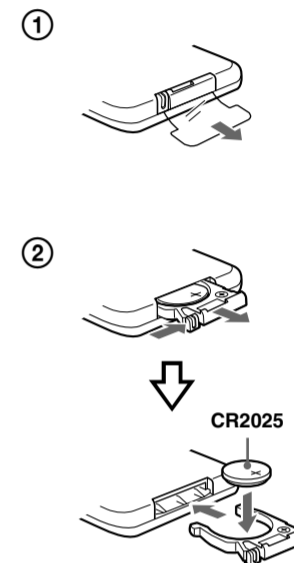 

©2008 Sony Corporation Printed in China

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

WARNING

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Replace the battery for the clock backup with a Sony CR2032 lithium battery, and the battery for the remote commander with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.
- Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.
- Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.
- Dispose of used battery promptly. Keep away from children.

Precautions

- Operate the unit on the power source specified in "Specifications".
- To disconnect the power cord (mains lead), pull it out by the plug, not the cord.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, blanket, etc.) or near materials (a curtain) that might block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by a qualified personnel before operating it any further.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.
- Do not connect the aerial lead to the external aerial.
- To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

NOTES ON LITHIUM BATTERY

- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Features

 
- Dual alarm FM/AM Clock radio with iPod dock.
- Various type of alarms- iPod, radio and buzzer.
- SUMMER TIME button to adjust Daylight Saving Time/Summer time.
- CLOCK button to display month, day and year.
- Brightness control (High/Middle/Low).
- Supplied CR2032 battery for backup power source to keep the clock and alarm operating during a power interruption.

Connecting the aerial

To connect the AM loop aerial


The shape and the length of the aerial is designed to receive AM signals. Do not dismantle or roll up the aerial.

- 1 Remove only the loop part from the plastic stand.
- 2 Set up the AM loop aerial.



- 3 Connect the cords to the AM aerial terminals. The cords (A and B) can be connected to either terminal.

 Insert the cord while pushing down the terminal clamp.

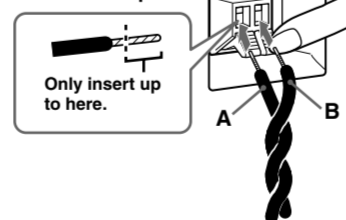

- 4 Make sure the AM loop aerial is connected firmly by pulling softly.

Adjusting the AM loop aerial

Find a place and an orientation that provide good reception.

- Do not place the AM loop aerial near the unit or other AV equipment, as noise may result.
- If you use an external polarized AM aerial, be sure to connect the ground cord to the ⏏ terminal. The supplied AM aerial cord has no polarity.

Tip

Adjust the direction of the AM loop aerial for best AM broadcast sound.

About the backup battery

To keep good time, as a backup power source, this unit needs one CR2032 battery (supplied), in addition to the house current.

The battery keeps the clock and the alarm operating in the event of a power interruption. Note that the backlight will not light up during a power interruption.

Knowing when to replace the battery

If the battery runs out during the interruption, the current time and alarm functions will be initialized.

Replace the battery with a Sony CR2032 lithium battery. Use of another battery may present a risk of fire or explosion.

Installing and replacing the backup battery

- 1 Keep the AC plug connected to the AC outlet, remove the screw that secures the battery compartment at the bottom of the unit using a screwdriver, and remove the battery compartment. (See Fig. A-①)
- 2 Insert a new battery in the battery compartment with the ⊕ side facing up. To remove the battery from the battery compartment, push it out from the side marked PUSH. (See Fig. A-②)
- 3 Insert the battery compartment back into the unit and secure it with the screw. (See Fig. A-③)

Note

When you replace the battery, keep the AC plug connected to a wall outlet. Otherwise, current time and alarms will be initialized if the replacement is not completed within around one minute.

If the time in the display is incorrect after the battery is changed (RESET)

Push the Reset switch with the pointed device. The Reset switch is in the small hole located in the battery compartment.

Notes

- You cannot reset unless the lithium battery is installed.
- Set the clock again after the unit is reset.

Battery Warning

When the unit will be left unplugged for a long time, remove the battery to avoid undue battery discharge and damage to the unit from battery leakage.

Preparing the remote commander

Before using the card remote commander for the first time, remove the insulation film. (See Fig. B-①)

When to replace the battery

With normal use, the battery (CR2025) should last for about six months. When the remote commander no longer operates the unit, replace the battery with new ones. (See Fig. B-②)

Notes

- Do not charge the battery.
- When you are not going to use the remote commander for a long time, remove the battery to avoid any damage caused by leakage and corrosion.

