



* 4 1 2 4 1 1 2 1 2 * (1)

4-124-112-12(1)

SONY®



Active Speaker System Operating Instructions

SRS-NWGT10

©2008 Sony Corporation Printed in Malaysia

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the AC power adaptor in a confined space, such as a bookcase or built-in cabinet.

Connect the AC power adaptor to an easily accessible AC outlet. Should you notice an abnormality in the AC power adaptor, disconnect it from the AC outlet immediately.

The nameplate is located in the rear.

Notice for customers: the following information is only applicable to equipment sold in countries applying EU directives

The manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minatoku, Tokyo, Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Specifications

Continuous RMS power output (reference)*1:	1W +1 W (1 kHz, 10% THD)
Input:	WM-PORT*2 (22 pin) See below for compatible "WALKMAN" models.
Speaker:	39 mm dia.
Dimensions (w/h/d):	Approx. 152 × 105 × 20 mm (6 × 4 1/4 × 13/16 inches)
Dimensions (w/h/d, upright position):	Approx. 152 × 105 × 60 mm (6 × 4 1/4 × 2 3/8 inches)
Mass:	Approx. 140 g (5 oz)
Operating temperature:	5°C to 35°C (41 °F to 95 °F)
Power requirements:	DC 5.2 V (100-240 V)
Power source (2 way power supply):	AC power adaptor (supplied)/ Battery supply from the "WALKMAN"

Design and specifications are subject to change without notice.

*1 When using the AC power adaptor.

*2 The WM-PORT is a dedicated multi-terminal connector, used to connect a "WALKMAN" to its accessories.

About the customer support Web site

If you have any questions or issues with this product, or would like information on compatible items with this product, visit the following web sites.

For customers in the USA: <http://www.sony.com/walkmansupport>

For customers in Canada: <http://www.sony.ca/ElectronicsSupport/>

For customers in Europe: <http://support.sony-europe.com/DNA>

For customers in Latin America: <http://www.sony-latin.com/index.crp>


For customers in other countries/regions: <http://www.sony-asia.com/support>

For customers who purchased the overseas models: <http://www.sony.co.jp/overseas/support/>

Precautions

On safety

- AC power cord must be changed only at a qualified service shop.
- Use only the supplied AC power adaptor. Do not use any other AC power adaptor.

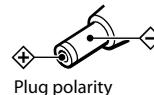

Plug polarity

On placement


- Do not place the system in an inclined position.
- Do not place the system in locations that are hot or subject to direct sunlight, dust, high humidity, or extreme cold.
- Use caution when placing the system on a specially treated (waxed, oiled, polished, etc.) floor, as staining or discoloration may result.

On cleaning

Clean the casings with a soft cloth lightly moistened with a mild detergent solution or water. Do not use any type of abrasive pad, scouring powder or solvent, such as alcohol or benzene.

Checking Supplied Items

- Speaker (this system, 1)

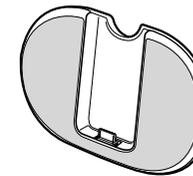

- Attachment* (2)
Attachment (E) For NWZ-E430F series
Attachment (S) For NWZ-S730F/S630F series




Mark (E)



Mark (S)

* Each attachment has the identification mark for your "WALKMAN" model on its bottom.

Parts and Controls

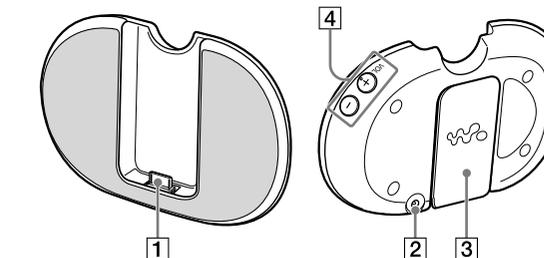

1 WM-PORT

2 DC IN 5.2V jack


3 Stand

4 VOLUME +/- button

• "WALKMAN" and "WALKMAN" logo are registered trademarks of Sony Corporation.
• All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, "™" and "®" marks are not specified.


Installation

- 1 Set up the stand located on the rear side of the system ①, connect the AC power adaptor ②, and put the plug of the AC power adaptor in the wall outlet ③.

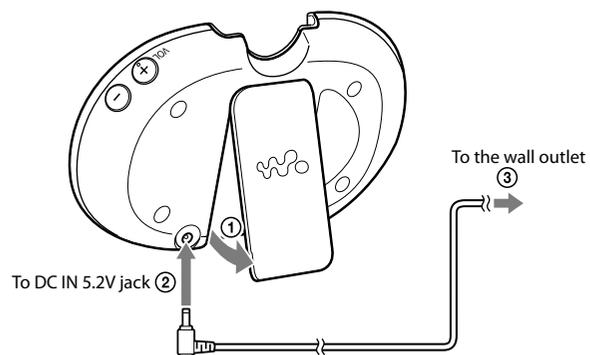


- 2 Set the supplied attachment into the system until it clicks as shown in the illustration.


Set the attachment for use with your "WALKMAN" model. Each attachment has the identification mark (E) for the NWZ-E430F series and (S) for the NWZ-S730F/S630F series.

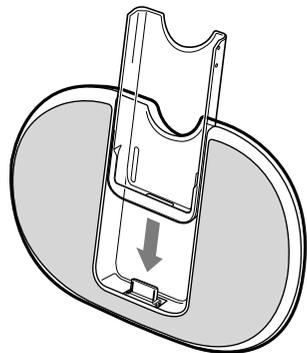

- 3 Install the "WALKMAN" in the system.

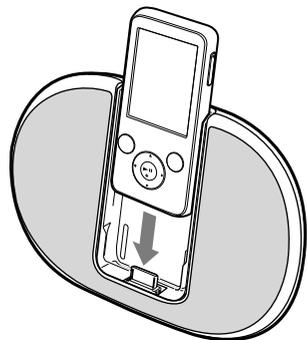


Make sure that the "WALKMAN" is placed properly in the WM-PORT of the system for proper connection.

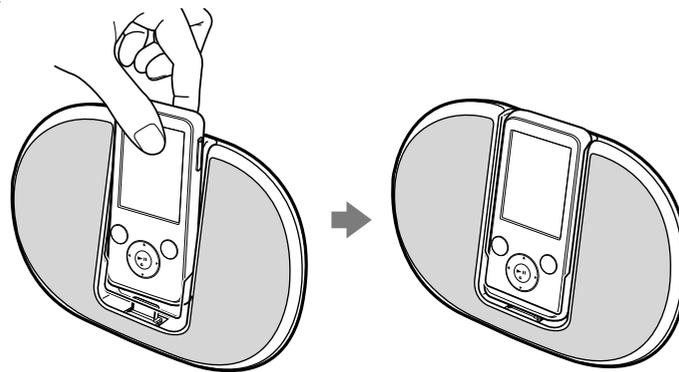

Listening to Music

- 1 Play back content on your "WALKMAN."
- 2 Press the VOLUME +/- button on the system to adjust the volume.

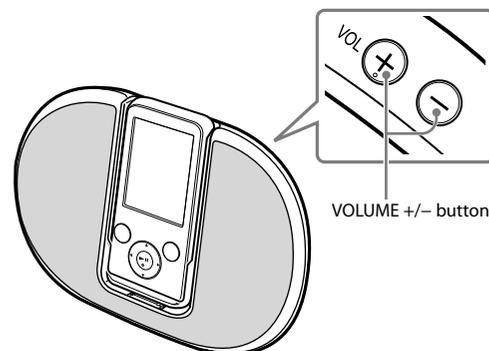

Hints

- You can perform playback on your "WALKMAN" installed in the system without connecting the AC power adaptor.
- For details on how to perform playback on your "WALKMAN," refer to the "Operation Guide" supplied with your "WALKMAN."

Notes

- When playing on your "WALKMAN" without the AC power adaptor connected, volume output from the system is reduced. The battery of your "WALKMAN" is also consumed.
- If you want to adjust the volume, do so while your "WALKMAN" is installed. If you disconnect the AC power adaptor during playback and also detach your "WALKMAN," the volume is reset to the default setting.
- If your "WALKMAN" model's headphone jack is on the same side as the WM-PORT jack, you cannot use the FM radio function while your "WALKMAN" is installed into the system.
- When operating your "WALKMAN" while it is installed into the system, brace it with your other hand.

Available playback time with no AC power adaptor connected

NWZ-E430F series: 16 hours (approx.)

NWZ-S730F/S630F series: 17 hours (approx.)

* When playing at MP3, 128 kbps

To recharge the battery of your "WALKMAN"

If you put your "WALKMAN" in the system while the AC power adaptor is connected, battery charging starts automatically. Charging progress is displayed on the "WALKMAN." For details, refer to the "Operation Guide" supplied with your "WALKMAN."

Troubleshooting

Should you encounter a problem with the system, find your problem in the troubleshooting checklist below and take the indicated corrective action. If the problem persists, contact your Sony dealer.

Note that if service personnel change some parts during repair, these parts may be retained. When bringing the system in for repairs, be sure to bring in the entire system.

This product is a system product, and the entire system is needed to determine the problem.

There is no sound.

- Make sure the AC power adaptor and power cord are securely connected.
- Press the VOLUME + button to turn up the volume.
- Make sure your "WALKMAN" is securely connected.
- Make sure your "WALKMAN" is playing music.

There is a severe hum or noise.

- Move the system away from any possible sources of noise.
- Connect the AC power adaptor to a different mains.


The sound is distorted.

- Press the VOLUME - button to reduce the volume.
- Set the sound mode of the "WALKMAN" to normal or flat sound quality.

The stand becomes detached.

- Install the stand into the system by following the procedure below.

- ① Fit the upper right hinge of the stand on the right side pin on the rear of the system. Be sure to fit the hinge on the right side pin first.

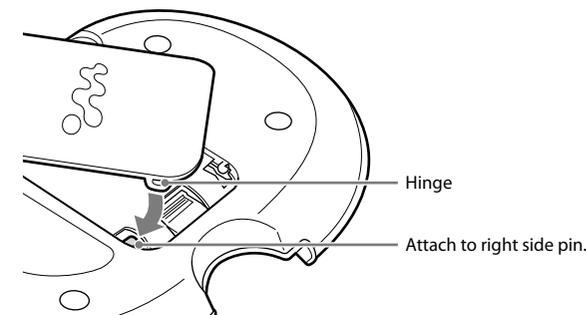

- ② Fit the other hinge on the left pin, and then press down the stand until it clicks.

