



For details, refer to the Operating Instructions.  
詳細資訊，請參閱使用說明書。



## Quick Setup Guide/快速設定指南

### BDV-E870/E370


©2010 Sony Corporation Printed in Malaysia

# 1 Connect the speakers/連接揚聲器

Connect the speaker cords to match the color of the SPEAKERS jacks of the unit.  
將揚聲器導線連接到本機上對應顏色的 SPEAKERS 插孔。

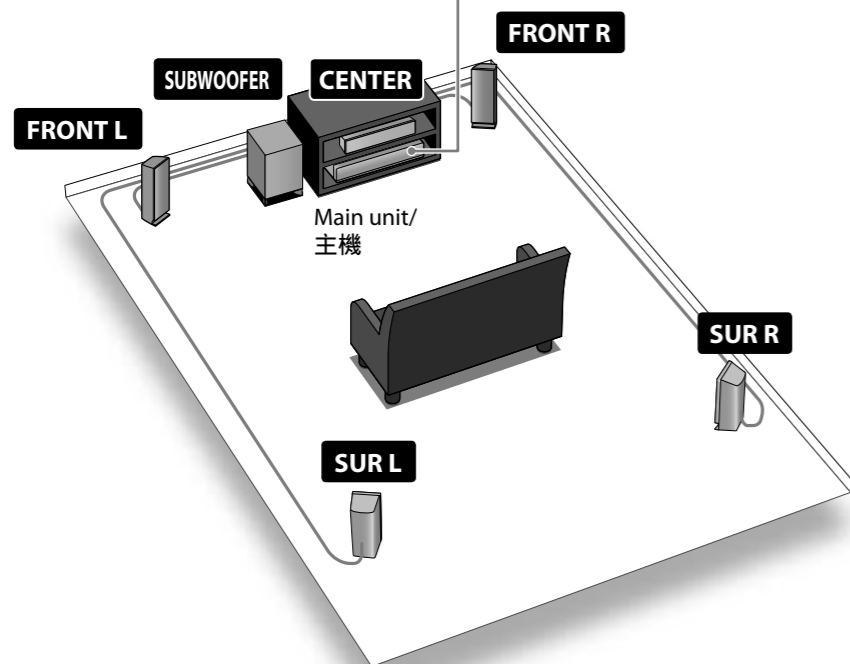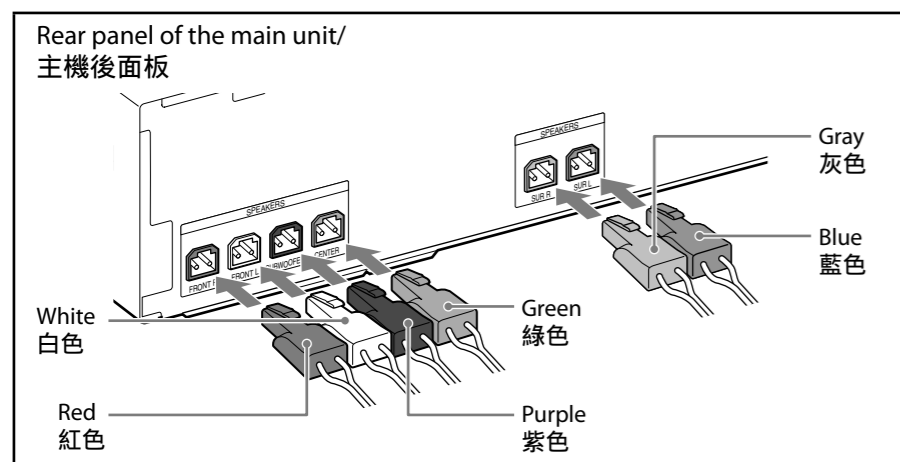



To connect speaker cords to the speaker/將揚聲器導線連接到揚聲器

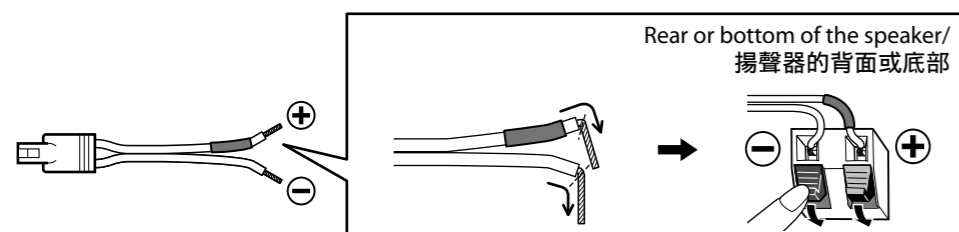

# 2 Connect your TV/set-top box/連接電視機/機上盒

Depending on the jacks on your TV or set-top box, select the video and audio connection method.  
視電視機或機上盒上的插孔而定，選擇視頻和聲音連接方法。



## Connecting the video to your TV/將視頻連接至電視機

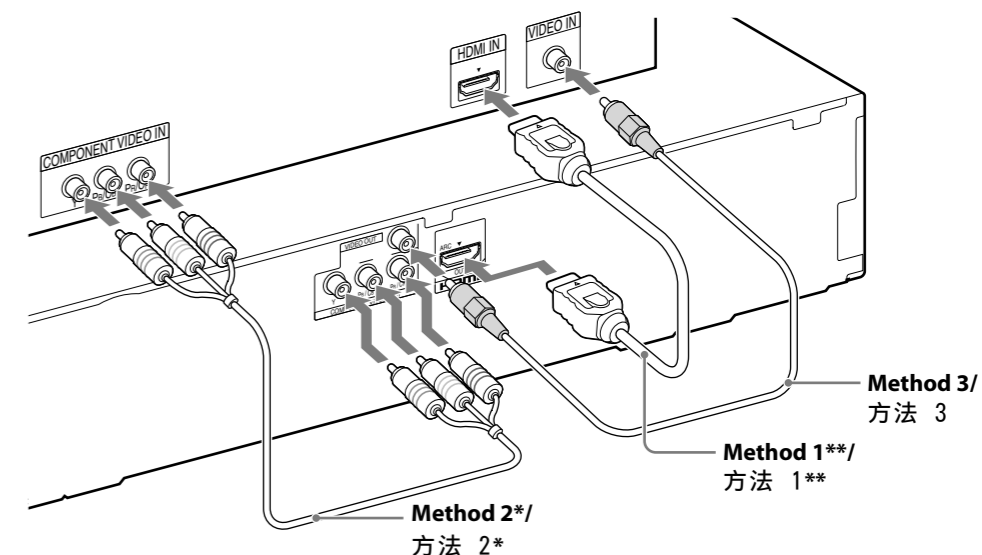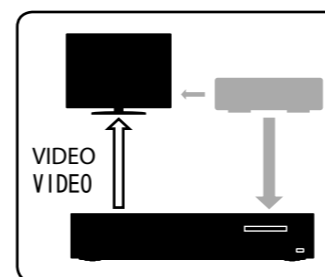

\*Not supplied/\*不提供  
\*\*Supplied with Singapore, Thai, and Taiwan models only.  
\*\*僅新加坡、泰國與台灣機型提供。

## Connecting the audio from your set-top box/連接來自機上盒的聲音

If you do not use a set-top box, refer to "Connecting the TV (Audio connection)" in the Operating Instructions.  
若不使用機上盒，請參閱使用說明書的“連接電視機（聲音連接）”。

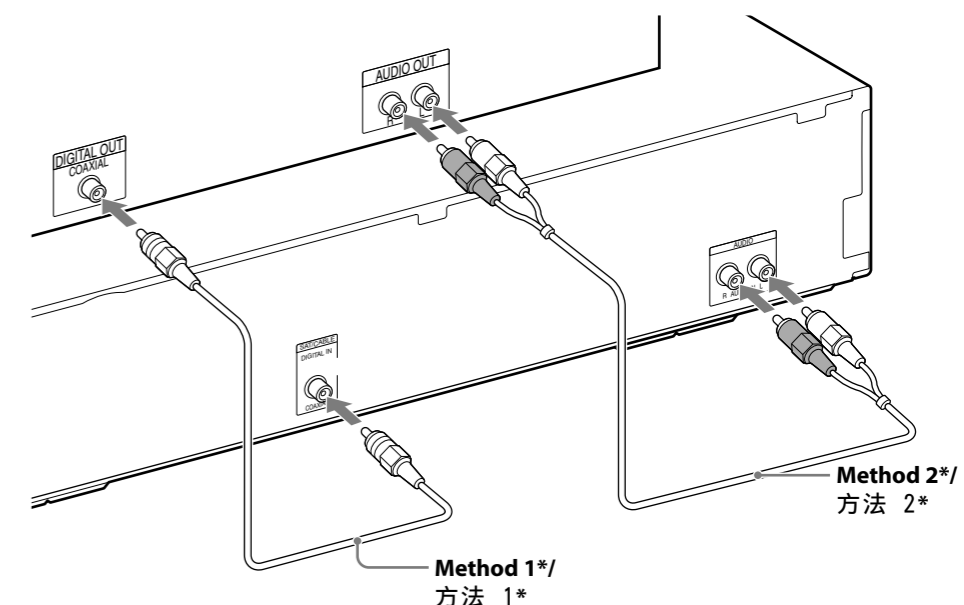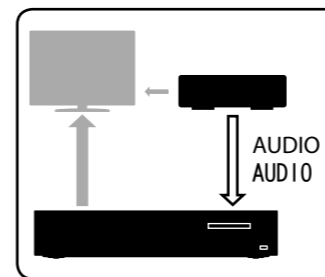


\*Not supplied/\*不提供

### 3 Connect the AC power cords/ 連接交流電源線

Connect the AC power cords (①), and turn on the power (②).

連接交流電源線 (①)，然後打開電源 (②)。

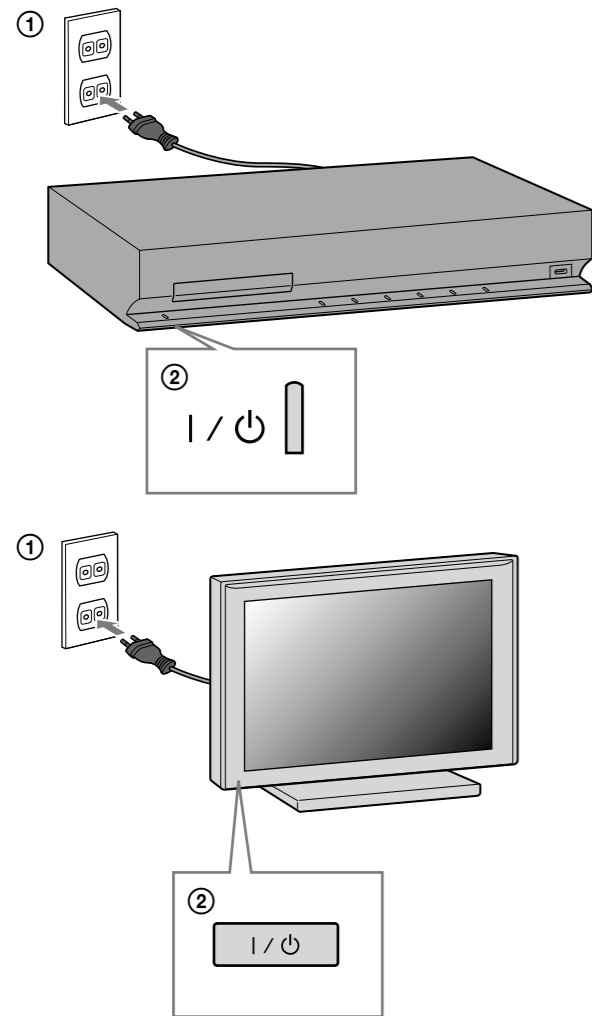


### 4 Perform "Easy Setup"/ 執行“簡易設置”

Do not insert a disc before performing the "Easy Setup".  
執行“簡易設置”前，切勿插入光碟。

#### 1. Insert batteries into the remote.

將電池裝入遙控器。

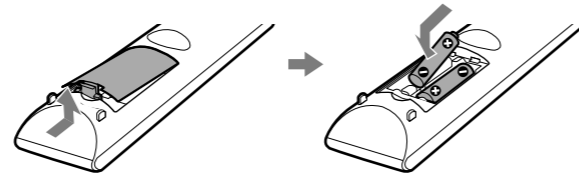


#### 2. Switch the input selector on your TV so that system screens like the ones below appear on the TV screen.

切換電視機上的輸入選擇器，類似以下畫面的系統螢幕會出現在電視機螢幕上。

Starting up/  
啟動




"Easy Setup" screen/  
“簡易設置”畫面

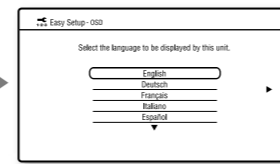

#### 3. Perform basic settings by following the on-screen instructions in "Easy Setup" using ←/↑/↓/→ and +.

使用 ←/↑/↓/→ 和 +，依照“簡易設置”中的畫面指示，執行基本設定。

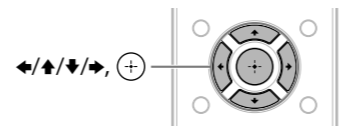


[Easy Setup is now complete.] appears when "Easy Setup" is complete.

“簡易設置”完成時，會出現 [現在簡易設置已經完成。]。



### 5 Play a disc/ 播放光碟

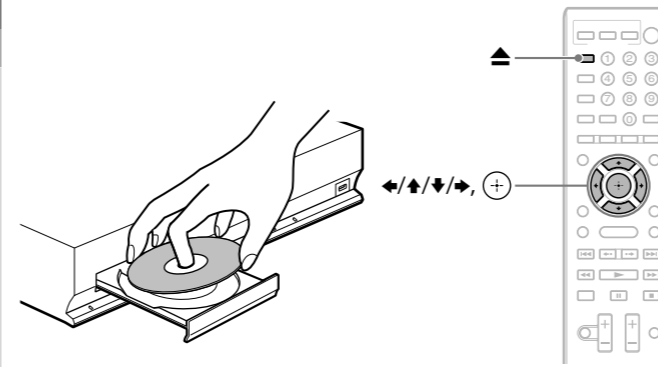

#### 1. Press ▲, and place a disc on the tray.

按 ▲，然後將光碟放入托盤。

#### 2. Press ▲ to close the disc tray.

Playback starts. If playback does not start automatically, select ● in the [Video], [Music], or [Photo] category, and press +.

按 ▲ 關閉光碟托盤。

開始播放。如果播放沒有自動開始，在 [視訊]、[音樂] 或 [相片] 類別中選擇 ●，然後按 + 鍵。

#### Enjoying more BD functions

Refer to "Enjoying BONUSVIEW/BD-LIVE" in the Operating Instructions.

欣賞更多 BD 功能

請參閱使用說明書中的“欣賞 BONUSVIEW/BD-LIVE”。