





### 1 Setting up the speakers

#### 1. Connect the speaker cords to the subwoofer.


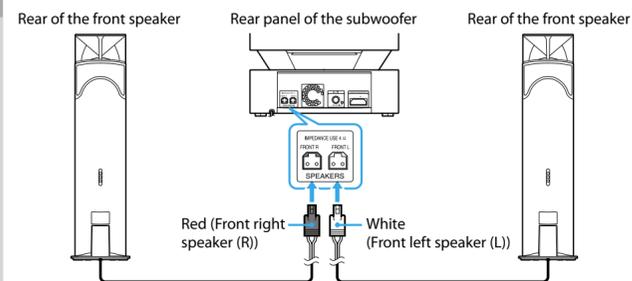


#### 2. Remove the panel cover from the main unit.


Press the panel cover at (A) gently, then slide it out to the side.

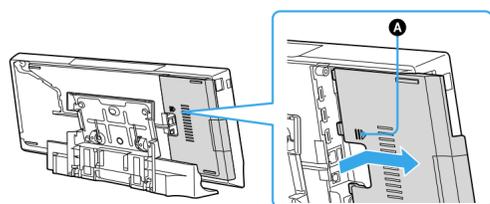

#### 3. Insert the wireless transceivers into the main unit and subwoofer.

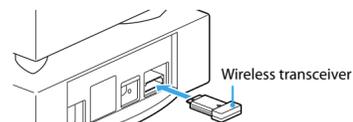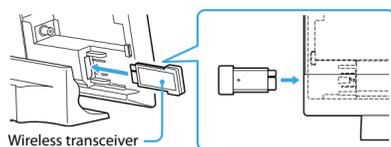


#### 4. Position the speakers.

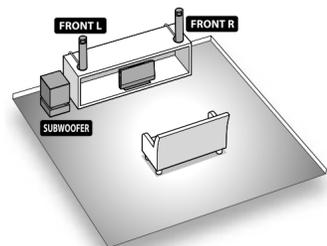

### 2 Connect your TV and other components


#### 1. Connect a High Speed HDMI cable to your TV.

Depending on the jacks on your TV, select the video and audio connection method.

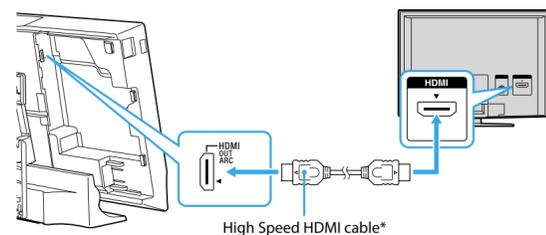


\* Not supplied

#### 2. Connect a High Speed HDMI cable to your set-top box, game console or digital satellite receiver.

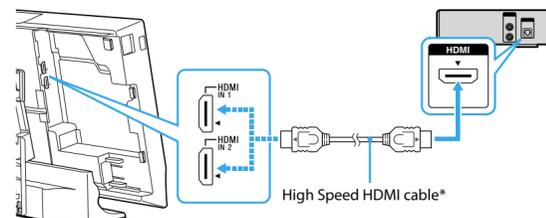


\* Not supplied

#### 3. Plug the connector of the AC adapter into the DC IN 14V connector on the rear of the main unit. Thread the AC power cord (mains lead) through the gap on the main unit by securing it behind the tabs, guide it through the slot at the left of the main unit, behind the clamp (B), and through the slot at the bottom of the main unit.

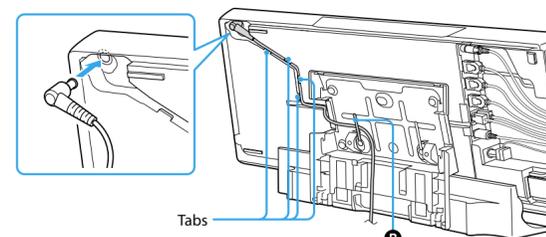


#### 4. Bring together the cables (except the FM wire antenna (aerial)), guide them through the slot at the right of the main unit, behind the clamp (C), and through the slot at the bottom of the main unit. Thread the FM wire antenna (aerial) through the small indentation at the rear of the main unit.

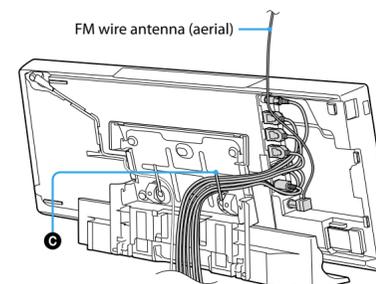


#### 5. Attach the panel cover to the rear of the main unit.

Put the left edge of the lower part of the panel cover on (D), align the bottom projection of the panel cover with (E), and then slide it inward until it clicks into place.

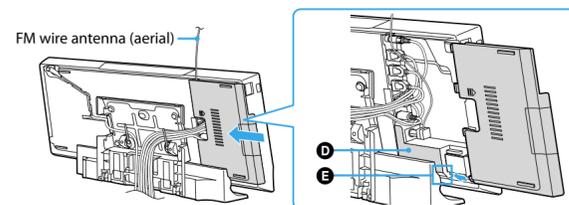

#### 6. Attach the stand cover to the rear of the main unit.

Align both edges of lower part of the stand cover with the guides on the stand (F), and then slide the stand cover down gently.

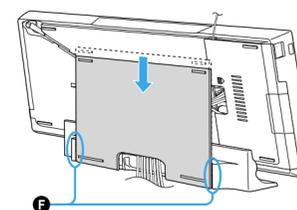


### 3 Perform "Easy Setup"

Do not insert a disc before performing the "Easy Setup".


#### 1. Insert batteries into the remote.

#### 2. Connect the AC power cords (mains leads) of the main unit and subwoofer.

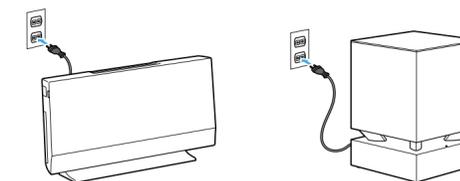


#### 3. Press I/ON on the main unit to turn the system on.


After the subwoofer turns on, the LINK/STANDBY indicator (G) turns green and the wireless transmission is activated.

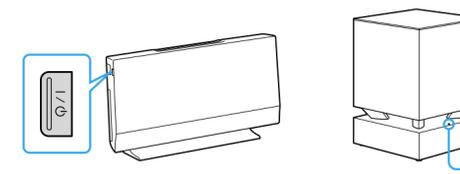

#### 4. Turn on the TV, and switch the input selector on your TV so that system screens like the ones below appear on the TV screen.

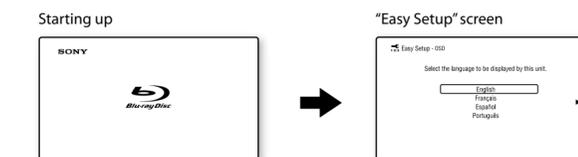

#### 5. Perform basic settings by following the on-screen instructions in "Easy Setup" using ←/→/↑/↓ and +.

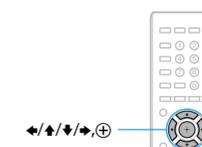

[Easy Setup is now complete.] appears when "Easy Setup" is complete.