





SRS-XB30

4-693-384-12(1)
©2017 Sony Corporation Printed in China




* 4 6 9 3 3 8 4 1 2 * (1)




1

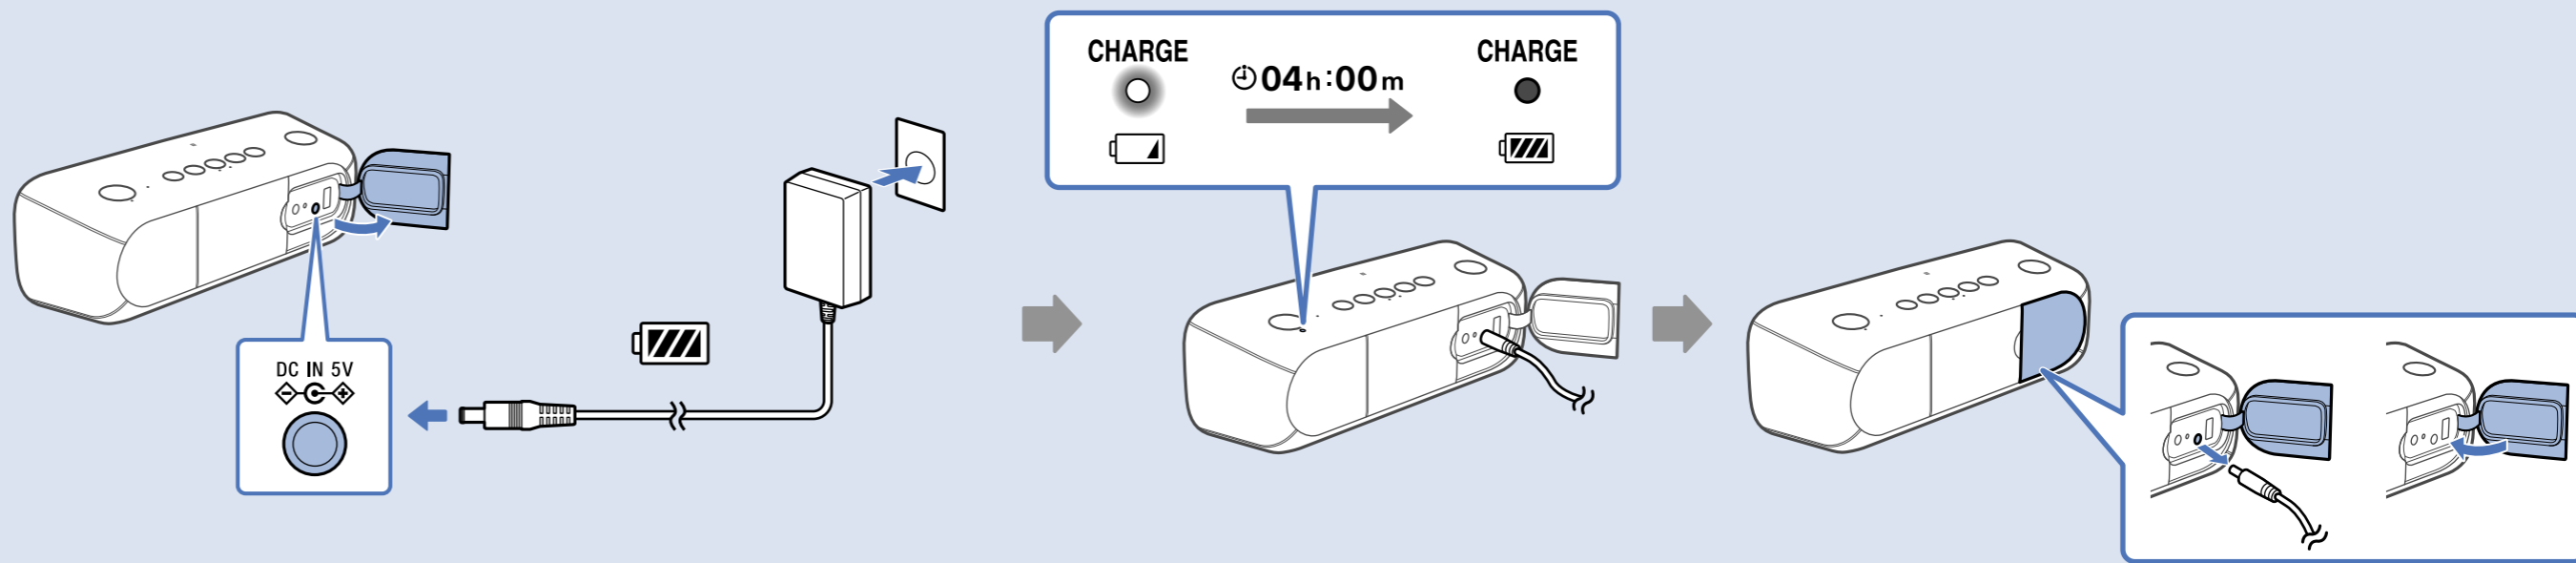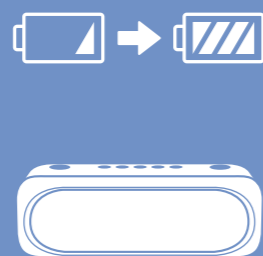

2

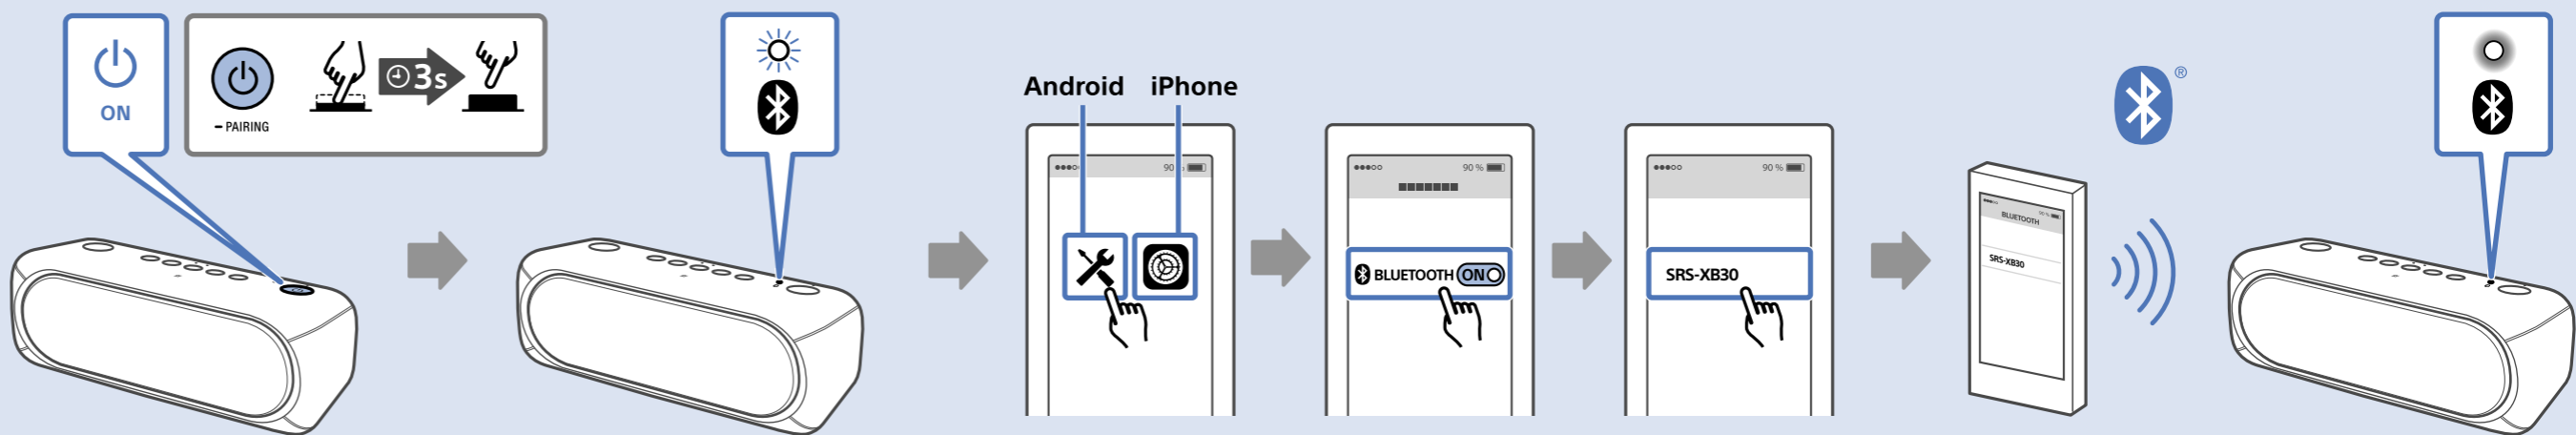

3

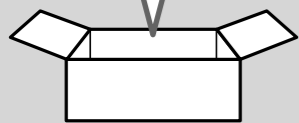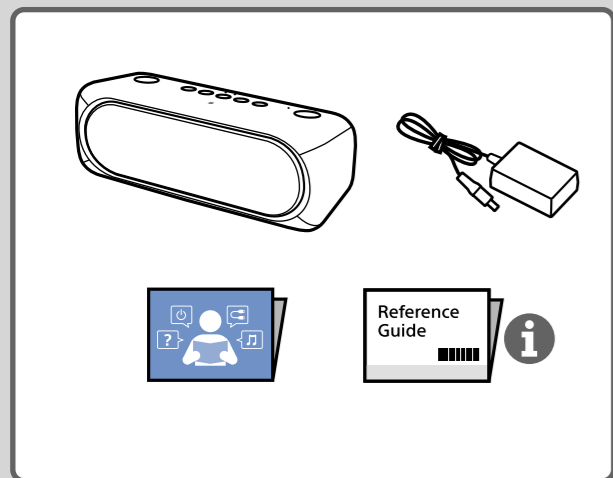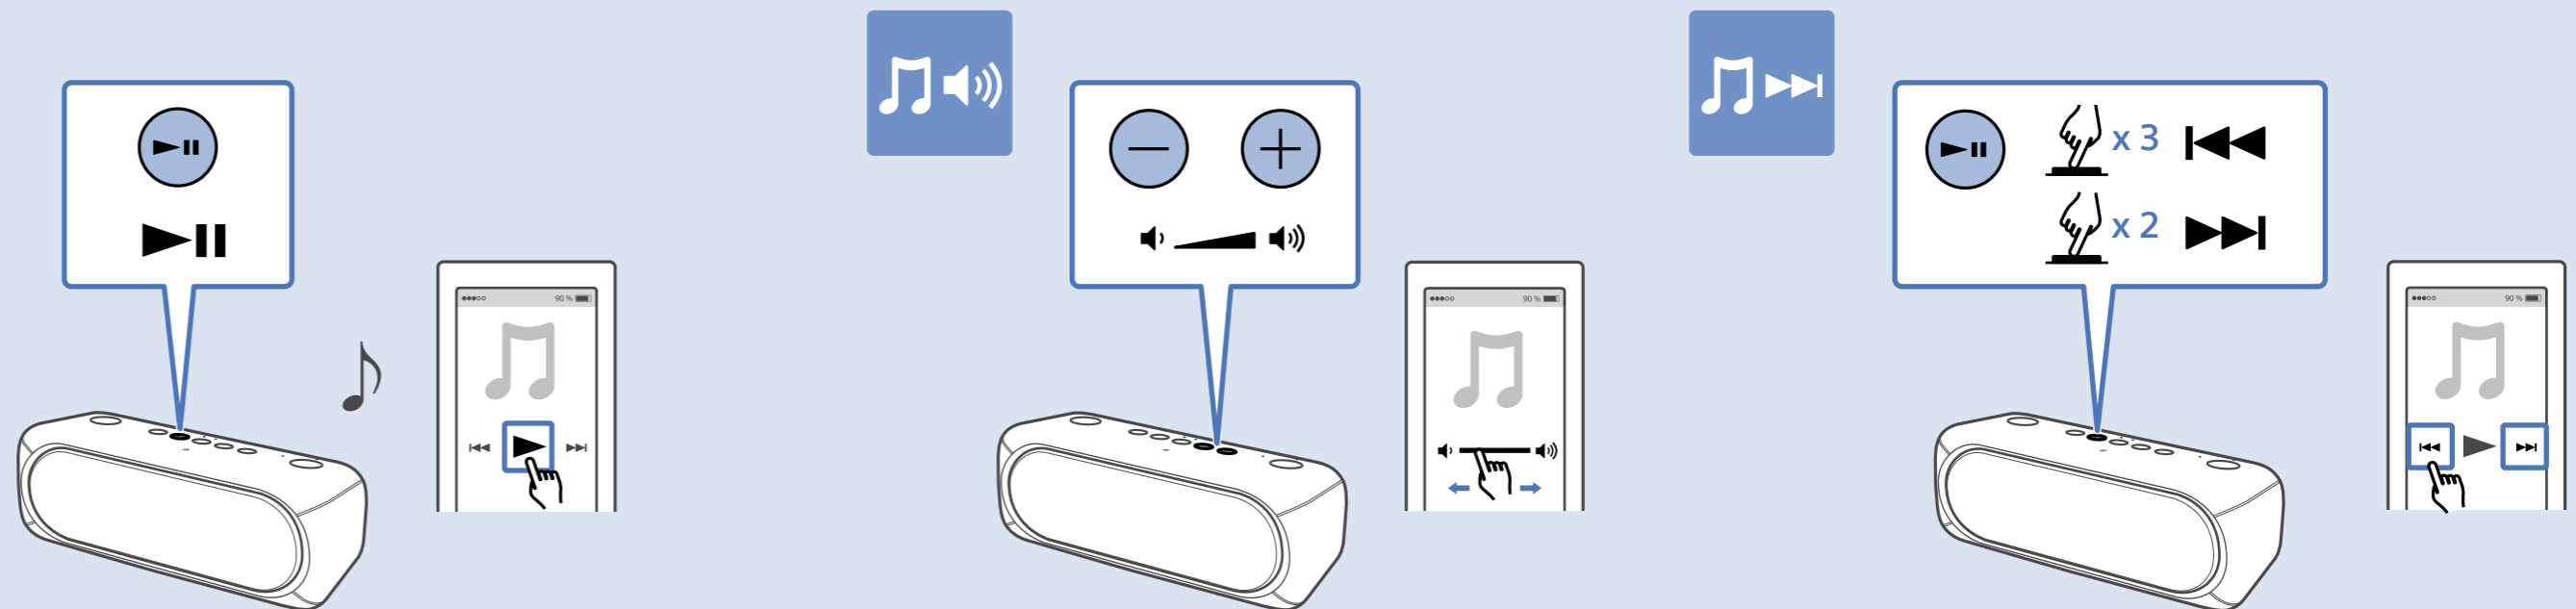


http://rd1.sony.net/help/speaker/srs-xb30/h_zz/








LIGHT

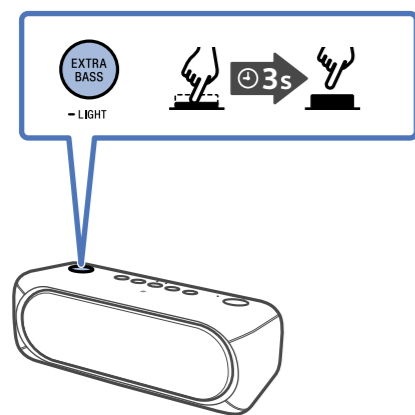


ON

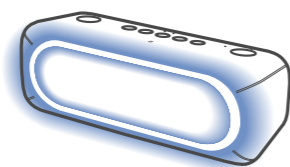







OFF

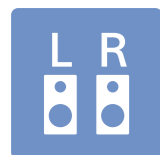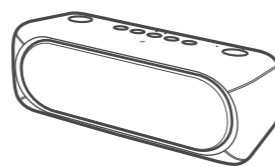



Speaker Add

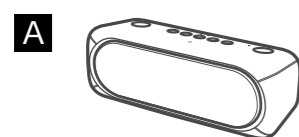

SRS-XB30

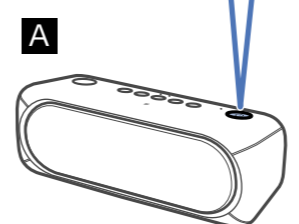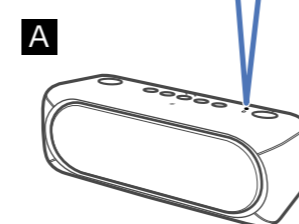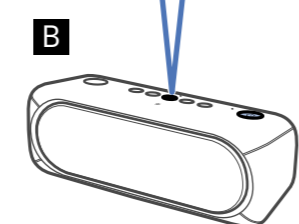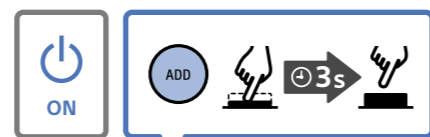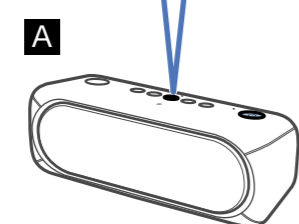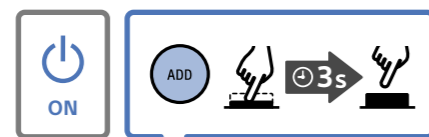








Android iPhone

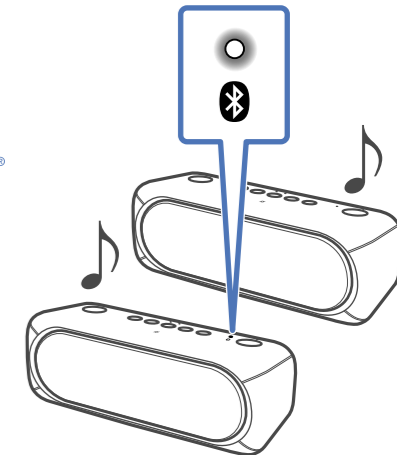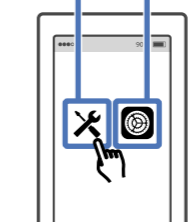

Wireless Party Chain



SRS-XB30

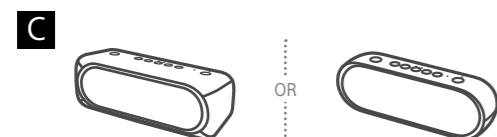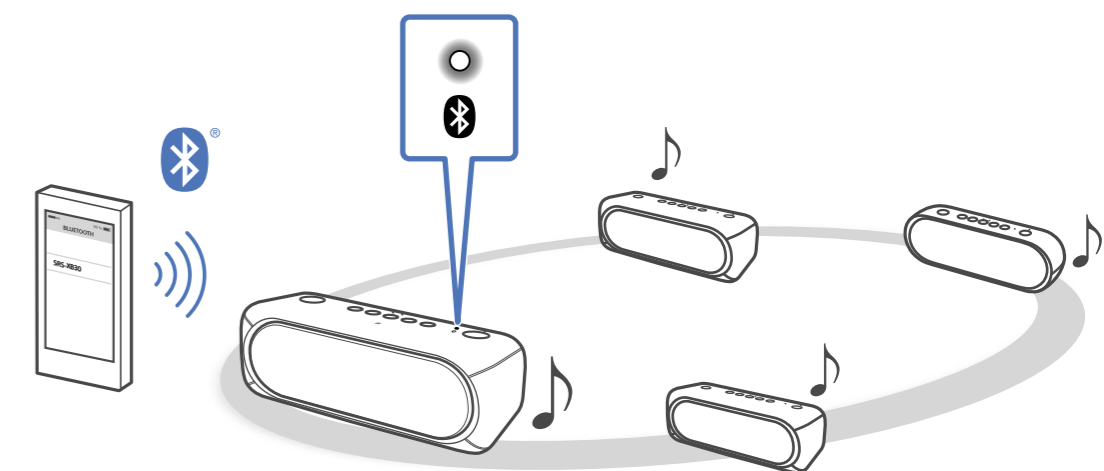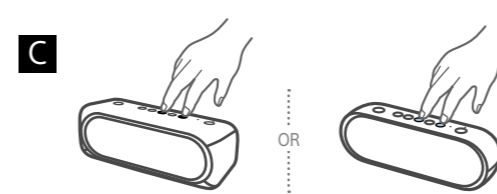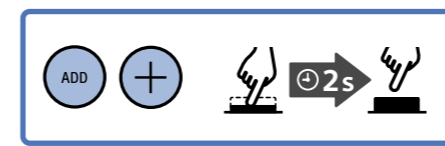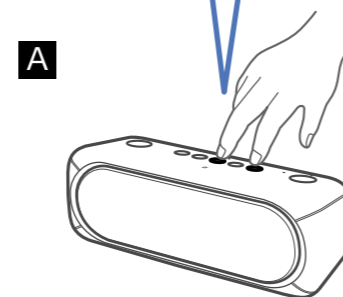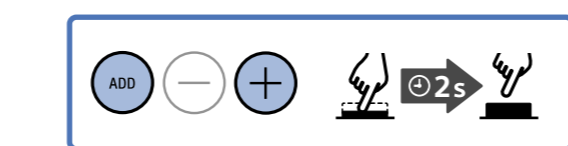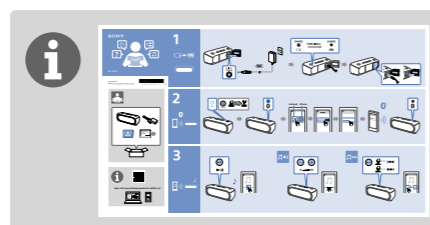

SRS-XB40
SRS-XB30



SRS-XB20

