

お手入れ

よい音でテープを聞くために

10時間程度使ったら、別売りのクリーニングカセット(CHK-1W)でヘッド、ピンチローラーをきれいにしてください。

クリーニングカセットは指定のものをお使いください

他のクリーニングカセットを使うと故障の原因となることがあります。

本体表面が汚れたときは


水気を含ませた柔らかい布で軽くふいたあと、からぶきします。シンナーやベンジン、アルコールは表面の仕上げを傷めますので使わないでください。

ヘッドホンおよびリモコンのプラグのお手入れについて

常によい音でお聞きいただくために、プラグをときどき柔らかい布でからぶきし、清潔に保ってください。汚れていると、雑音の原因になることがあります。

端子のお手入れについて

定期的に関の各端子や充電器などの端子を綿棒や柔らかい布などで、きれいにしてください。

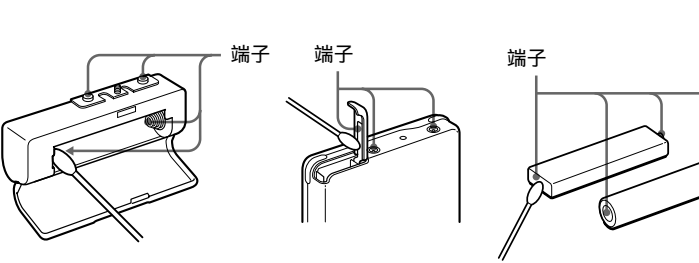

主な仕様

トラック方式	コンパクトカセットステレオ
周波数範囲(EIAJ*)	DOLBY NR OFF時 30～18,000 Hz (EIAJ*)
出力端子	ヘッドホンジャック(専用リモコンジャック)1個 負荷インピーダンス 8～300
実用最大出力(DC時)	4 mW + 4 mW (EIAJ 32)
電源	DC 1.5 V
	充電式電池(付属：NH-14WM、1.2 V、1,400 mAh、Ni-MH)、単3形乾電池 1個

電池持続時間(EIAJ)	乾電池、充電式電池の持続時間については「電源」をご覧ください。
最大外形寸法	約78.7 x 108.6 x 18.7 mm (幅/高さ/奥行き)
質量	本体 約180 g ご使用時 約 240g (充電式電池NH-14WM、テープ C-60HF含む)

* EIAJ(日本電子機械工業会)規格による測定値です。

本機の仕様および外観は、改良のため予告なく変更することがありますが、ご了承ください。

別売りアクセサリー
充電式ニッケル水素電池 NH-14WM、クリーニングカセット CHK-1W、ステレオイヤーレーンパー(ヘッドホン)* MDR-ED238SP (GROOVE対応)、MDR-E888SP、MDR-EX70SL

*ヘッドホンは、本体のREMOTE△ジャックに直接つなぐときも、リモコンにつなぐときも、ステレオミニプラグのものを求めください。

故障かな？

故障とお考えになる前に、次のような点をご確認ください。

症状	原因	処置
ブランクスキップ、AMS、1曲リピートが正しく動作しない	消耗した充電式電池または乾電池を使っている。マンガン乾電池を使っている。(ブランクスキップやAMSなどは再生と比べて電流を多く消費し、電圧が低下するためです。)	充電式電池を充電する。乾電池は新しいソニールカリ乾電池と交換する。

「ビビビ」とエラー音が鳴り、操作できない	電池が消費している。	充電式電池を充電する。乾電池は新しいソニールカリ乾電池と交換する。
操作できない	ホールド機能が働いている。電池が消費している。	ホールドを解除する。充電式電池を充電する。乾電池は新しいソニールカリ乾電池と交換する。

テープ操作ができない	カセットが入っていない。	カセットを入れる。
------------	--------------	-----------

雑音が入る	近くで携帯電話などの電波を発する機器を使用している。充電器にのせたまま使用している。	携帯電話などから離して使用する。充電器からはずして使用する。
-------	--	--------------------------------


テープ再生中に勝手に早送りになる	ブランクスキップが働いている。	ブランクスキップを解除する(「いるいるな聞きかたをする」参照)。
------------------	-----------------	----------------------------------

リモコンで操作しても音量が大きくなる	AVLSが働いている。	本体のVOLつまみをNORMまたはMAXの位置に合わせる。
--------------------	-------------	-------------------------------


音が途切れる雑音が出る	ヘッドホンのプラグが汚れている。電池が消費している。	ヘッドホンのステレオミニプラグおよびリモコンのプラグをきれいにクリーニングする。充電式電池を充電する。乾電池は新しいソニールカリ乾電池と交換する。
-------------	----------------------------	---

動作や表示がおかしい	————	いったん電源・電池をはずして15秒以上たってから入れなおす。
充電器のCHARGEランプが点灯しない	充電式電池が入っていない。本体または充電器の端子が汚れている。	充電式電池を本体に入れる。端子をきれいにクリーニングする。

各部のなまえ

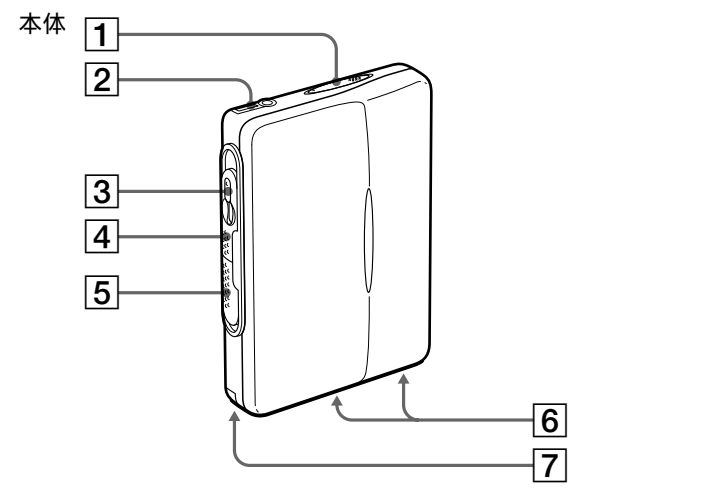

リモコンつきヘッドホン L(左) R(右)

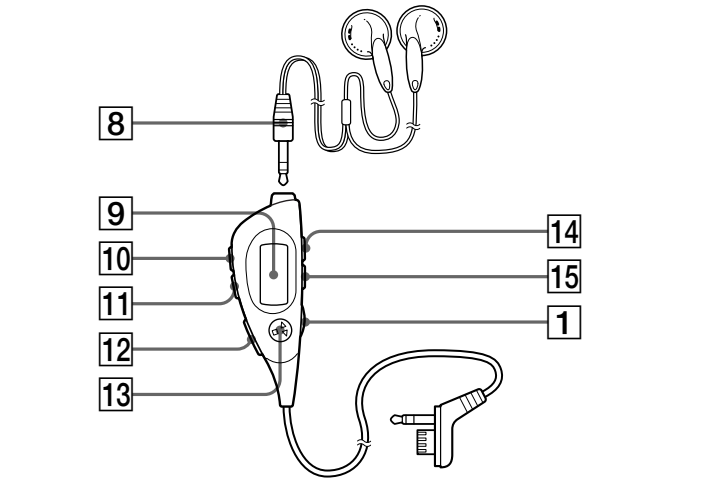

- 1 本体：VOLUME(音量調節)つまみ
リモコン：VOL(音量調節)つまみ
- 2 REMOTE△(ヘッドホン、リモコン)ジャック
- 3 操作ボタン
- 4 HOLD/OPERATION(誤操作防止/操作切り換え)つまみ
- 5 OPEN(カセットふた開け)つまみ
- 6 充電・乾電池ケース用端子
- 7 充電式電池入れ
- 8 ステレオミニプラグ
- 9 液晶表示窓*
- 10 SOUNDボタン
- 11 MODEボタン
- 12 HOLD(誤操作防止)スイッチ
- 13 ◀▶(再生)・■(停止)ボタン
- 14 FF(早送り)ボタン
- 15 REW(巻き戻し)ボタン

*液晶バックライトについて

リモコン操作時、本体操作時、電池残量表示が変化したときなどに、自動的に約5秒間点灯します。

<p>Sony online http://www.world.sony.com/</p> <p>「Sony online」は、インターネット上のソニーのエレクトロニクスとエンターテインメントのホームページです。</p>	
<p>ソニー株式会社 〒141-0001 東京都品川区北品川6-7-35</p>	
<p>お問い合わせはお客様ご相談センターへ</p> <p>●東京(03)5448-3311 ●名古屋(052)232-2611 ●大阪(06)6539-5111</p>	

English

▶Getting Started
Choosing a Power Source
Dry Battery <p>Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity. Be sure to insert it from the ● side as illustrated.</p> <p><i>Note</i></p> <ul style="list-style-type: none">For maximum performance we recommend that you use a Sony HF series cassette tape) <p><i>Note</i></p> <ul style="list-style-type: none">The battery life may shorten depending on the operation of the unit.

Rechargeable Battery
<ol style="list-style-type: none">Insert the supplied rechargeable battery NH-14WM into the rechargeable battery compartment with correct polarity. Plug in the charger to the house current (mains), and place the main unit on the charger. The CHARGE lamp will light up. About 30 minutes of charging will charge the battery to last about 3 hours. Full charging takes about 6 hours. The CHARGE lamp will go off when charging is complete. <p>You can charge the battery about 300 times.</p> <p><i>Note</i></p> <ul style="list-style-type: none">Do not use the unit while charging. If you play back the tape while charging, the battery will not be charged. The tape may stop in the middle of fast-forwarding or rewinding if it is done during charging. The sound may contain noise if a tape is played back with the main unit placed on the charger.

When to replace/charge the battery	
<p>The battery remainder mark has 5 steps to show the remaining battery power.</p> <p>When the battery is exhausted, tape playback will become unstable and noisy, and then the tape will stop. Replace or charge the battery when "□" flashes in the display.</p>	
Display	Condition
▣▣▣▣▣	There is enough battery power.
▣▣▣▣▣	
▣▣▣▣▣	The battery power is decreasing.
▣▣▣▣▣	
▣▣▣▣▣	The battery is exhausted. Replace it with a new battery.

Display	Condition
▣▣▣▣▣	There is enough battery power.
▣▣▣▣▣	
▣▣▣▣▣	The battery power is decreasing.
▣▣▣▣▣	
▣▣▣▣▣	The battery is exhausted. Replace it with a new battery.

When the battery is exhausted, tape playback will become unstable and noisy, and then the tape will stop. Replace or charge the battery when "□" flashes in the display.

Display	Condition
▣▣▣▣▣	There is enough battery power.
▣▣▣▣▣	
▣▣▣▣▣	The battery power is decreasing.
▣▣▣▣▣	
▣▣▣▣▣	The battery is exhausted. Replace it with a new battery.

Notes

- When you insert a charged battery, the battery remainder mark may show "▣▣▣▣" even if it is not fully charged. But the actual battery life is shorter.
- The battery remainder mark may temporarily show a lower level during fast forwarding or rewinding or use in extremely low temperatures.

Operation on the remote control	
To	Press (display)
Play the other side	◀▶ ・■ for more than a second during playback ("A" or "b" appears according to the playing side)
Stop playback	◀▶ ・■ once during playback
Fast forward*	FF during stop ("FF" appears)
Rewind*	REW during stop ("REW" appears)
Repeat the current track (Repeat Single Track function)	◀▶ ・■ twice during playback <i>To stop a single repeat, press ◀▶・■ once</i>
Play the next track/succeeding 9 tracks from the beginning (AMS*)	FF once/for the number of tracks to be skipped during playback ("AMS" and the number of tracks to be skipped appear)
Play the current track/previous 8 tracks from the beginning (AMS*)	REW once/for the number of tracks to be skipped during playback ("AMS" and the number of tracks to be skipped appear)
Play the other side from the beginning (Skip Reverse function)	FF for more than a second during stop ("FF" flashes)
Play the same side from the beginning (Rewind Auto Play function)	REW for more than a second during stop ("REW" flashes)

* If ◀▶ ・■ on the remote control is pressed during fast forward or rewind, the Walkman switches to playback.	
** Automatic Music Sensor	

Operation on the main unit	
<p>You can operate the tape with the operation button on the main unit. If the operation button is locked, slide HOLD/OPERATION switch in the direction of "▶" to release hold.</p>	
To	Press the operation button (beeps in the earphones)
Play back	Once
Play the other side	For more than a second during playback (Switching to side A: one short beep/ Switching to side B: two short beeps)
Stop playback	Once (One short beep)
Play the next track from the beginning (AMS*)	Twice during playback (One short beep, then repeated sets of a short beep and a long beep)
Play the current track from the beginning (AMS*)	Three times during playback (One short beep, then repeated sets of two short beeps and a long beep)
Repeat the current track (Repeat Single Track function)	Four times during playback (Repeated sets of a short beep, a long beep and a short beep when rewinding)

(continued)

Note on BL SKIP

Play the other side from the beginning (Skip Reverse function)	Twice during stop (One short beep, then repeated single beeps)
Play the same side from the beginning (Rewind Auto Play function)	Three times during stop (One short beep, then repeated sets of two short beeps)

* Automatic Music Sensor

Note

- When you are not sure of the playback status, press the operation button once. The Walkman will return to normal playback (except when you have pressed the operation button during normal playback).

Note on side A/B detection

- This Walkman detects the side being played using the cavity on side A of the cassette. If there is no cavity on the cassette or the cavity is on side B, the detection will not be done correctly.

Note on AMS and Repeat Single Track

- The AMS and the Repeat Single Track functions detect a blank of 4 seconds or longer between the tracks, these functions may not recognize the blank and may not operate. Likewise, if there is a low-level segment within a track, these functions may recognize it as a blank space.

Emphasizing Sound

- Press SOUND repeatedly. With each press, the indications change as follows:
SURROUND (Mega Surround)*: Dynamic Surround Sound
MB (Mega Bass): emphasizes bass sound (moderate effect)
RV (Sound Revitalizer): emphasizes treble sound none: normal (no effect)

- Mega Surround is a new sound mode combining the SRS headphone technology of SRS Labs, Inc., and the MEGA BASS technology of Sony Corporation. SRS Headphone and the ● symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. SRS technology is incorporated under license from SRS Labs, Inc.

Notes

- If the sound becomes distorted in the SURROUND mode, select other modes.
- You cannot change the mode during fast-forward or rewind.
- The setting is stored as long as the battery is not replaced.

Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

- Set the VOLUME switch on the main unit to AVLS MIN.

To cancel the AVLS function
Set the VOLUME switch on the main unit to NORM or MAX.

Locking the controls — HOLD function

On the remote control, slide the HOLD switch in the direction of the arrow to lock the controls. On the main unit, slide the HOLD/OPERATION switch so that "HOLD" becomes visible and the operation button is locked.