

# ***FM Stereo FM-AM Tuner***

---

## Operating Instructions

### Owner's Record

The model and serial numbers are located on the rear panel. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

***ST-SE570  
ST-SE370***

## WARNING

**To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.**

**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

Install this system so that the power cord can be unplugged from the wall socket immediately in the event of trouble.


To prevent fire, do not cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.



Don't throw a battery, dispose it as the injurious wastes.

## NOTICE FOR THE CUSTOMERS IN THE U.S.A.

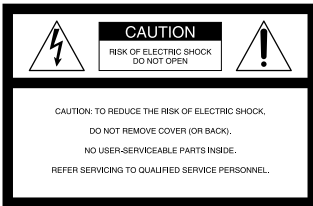

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## About This Manual

The instructions in this manual describe the operation of the Sony ST-SE570 and ST-SE370. Most operating procedures apply to both. However, there are certain procedures that may apply to only one of the tuners. These are clearly indicated (e.g., ST-SE570 only). Check the model number on the front of your tuner so you'll know which instructions apply to you.

In this manual, the display of ST-SE570 is used for illustration purposes.

# Table of Contents

## Parts Identification

Main unit .....	4
-----------------	---

---

## Getting Started

Unpacking .....	5
Hooking up the system .....	5
Selecting the German display .....	7
Storing FM stations automatically (Auto-betical Select)* .....	7
Presetting radio stations .....	8

---

## Basic Operations

Receiving preset stations .....	8
---------------------------------	---

---

## Advanced Tuner Operations

About the menu entry system .....	9
Customizing the display .....	9
Receiving broadcasts .....	9
Tips for better FM reception .....	10
Naming the preset stations .....	11
Organizing the preset stations .....	11
Using the Radio Data System (RDS)* ...	12

---

## Additional Information


Precautions .....	16
Troubleshooting .....	16
Specifications .....	17

\* European model only.

The items are arranged in alphabetical order.  
Refer to the pages indicated in parentheses ( ) for details.

## Main unit


### ST-SE570

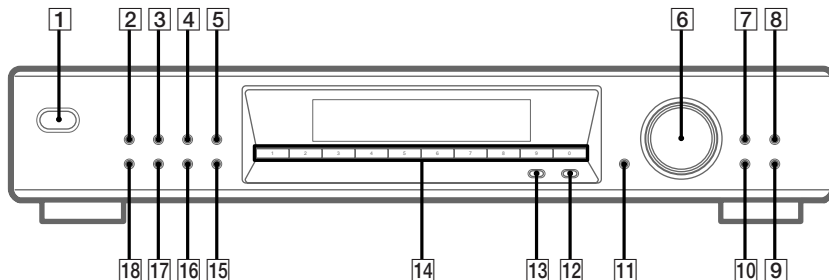

AUTO BETICAL SELECT **18** (7, 12)  
 BAND **15** (9, 10, 12)  
 CHARACTER **7** (11)  
 DIRECT **12** (9)  
 DISPLAY **5** (10, 11, 13)  
 ENTER **11** (9, 11, 12, 14)  
 EON NEWS/INFO **3** (13, 14)  
 EON TA **2** (13, 14)  
 FM MODE **16** (9, 10)

MEMORY **4** (8, 11)  
 MENU **10** (9, 11, 14)  
 Numeric buttons **14** (7–9)  
 POWER **1** (7, 8, 12)  
 PTY **17** (14, 15)  
 RETURN **9** (9)  
 SHIFT **13** (8, 11)  
 TUNE MODE **8** (8, 10)  
 TUNING/SELECT **6** (7–12, 14)

### ST-SE370

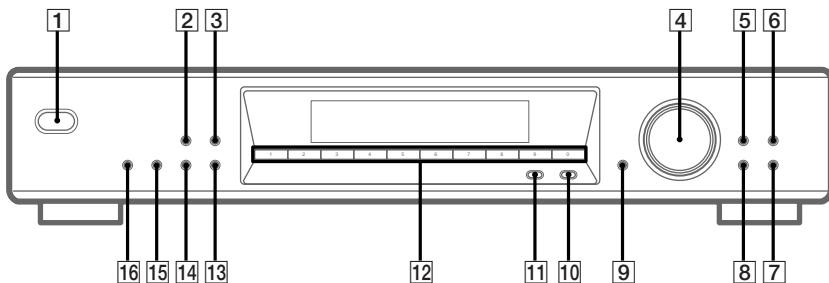

AUTO BETICAL SELECT (European model only)  
**16** (7, 12)  
 BAND **13** (9, 10, 12)  
 CHARACTER **5** (11)  
 DIRECT **10** (9)  
 DISPLAY **3** (10, 11, 13)  
 ENTER **9** (9, 11, 12, 14)  
 FM MODE **14** (9, 10)  
 MEMORY **2** (8, 11)

MENU **8** (9, 11, 14)  
 Numeric buttons **12** (7–9)  
 POWER **1** (7, 8, 12)  
 PTY (European model only) **15** (14, 15)  
 RETURN **7** (9)  
 SHIFT **11** (8, 11)  
 TUNE MODE **6** (8, 10)  
 TUNING/SELECT **4** (7–12, 14)

## Unpacking

Check that you received the following items with the tuner:

- Audio cord (1)
- AM loop antenna (1)
- FM wire antenna (1)
- EON connecting cord (ST-SE570 only, 1)

## Hooking up the system


### Before you get started

- Turn off the power to all components before making any connections.
- Do not connect the mains lead until all of the connections are completed.
- Be sure to make connections firmly to avoid hum and noise.
- When connecting an audio cord, be sure to match the colour-coded pins to the appropriate jacks: White (left) to White; and Red (right) to Red.

### AM antenna hookups

This section describes how to connect the supplied AM loop antenna. For the specific location of the AM ANTENNA terminals, see the illustration below.

AM ANTENNA

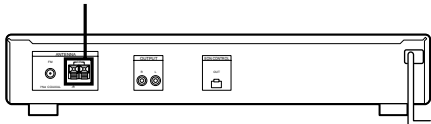

### What will I need?


- AM loop antenna (supplied) (1)




**1** Before assembling the supplied antenna, pull the lead wire out from the slot in the antenna frame.

**2** Unwrap 3 lengths of the braided lead wire from around the frame of the antenna.


Be careful to unwrap only the braided section of the lead wire. Do not unwrap more than 3 lengths of the lead wire. Also, be careful not to unbraided the lead wire.

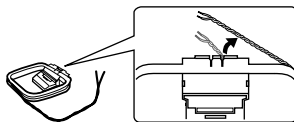

**3** Assemble the supplied antenna as shown below.

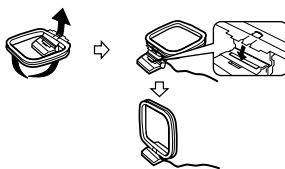

**4** Connect the AM loop antenna to the AM terminals on the back of this unit.

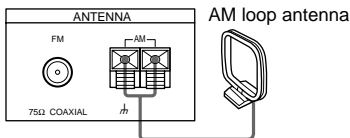

**5** Adjust the antenna direction for the best reception.

The AM loop antenna has a directivity which detects the signal from some angles more strongly than others. Set the antenna to the orientation which provides the best receiving condition.

If a high pitched noise (beat noise) occurs when recording AM broadcasts, adjust the position of the AM loop antenna so that the noise disappears.

If you live in a building constructed of reinforced concrete, or with a steel frame, you may not be able to achieve good reception since the radio waves become weaker indoors. In this case, we recommend connecting an optional antenna.

continued


## Hooking up the system (continued)

### Tip

For stations that are difficult to receive, try repositioning the loop antenna while tuning. Placing the supplied AM loop antenna near a window will help improve reception quality.


## FM antenna hookups

With an FM outdoor antenna, you can obtain a higher FM broadcast sound quality. We recommend that you use the supplied FM wire antenna only temporarily until you install an FM outdoor antenna. For the specific location of the FM ANTENNA terminal, see the illustration below.

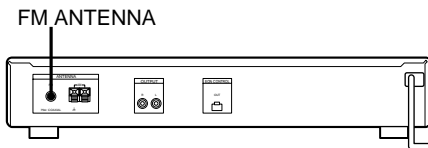


### What will I need?

- FM wire antenna (supplied) (1)





- FM outdoor antenna (not supplied) (1) and 75-ohm coaxial cable with IEC female type connector (not supplied) (1)



IEC female type connector

Connect the supplied FM wire antenna or an FM outdoor antenna (not supplied) to one of the FM terminals on the back of this unit.

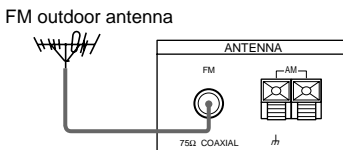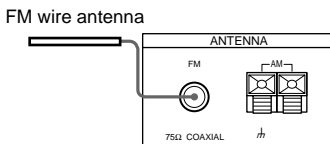


IEC female type connector

## Connecting a ground wire



If you connect an outdoor antenna, be sure to connect a earth lead (not supplied) to the AM ANTENNA  $\hbar$  terminal (in addition to the AM loop antenna) for lightning protection.

## Amplifier hookups

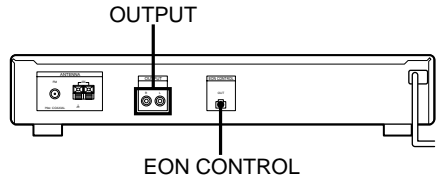
Connect the tuner to an amplifier. Be sure to turn off both components before connection. For the specific location of the terminals, see the illustration below.



### What cables will I need?


- Audio cord (supplied) (1)
- White (L)  White (L)  
Red (R)  Red (R)

Connect the white plugs to the white (L) jacks and the red plugs to the red (R) jacks. Insert the plugs completely into the jacks; incomplete connections may cause noise.

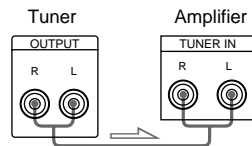


### Tip (ST-SE570 only)

If you have a Sony amplifier equipped with an EON CONTROL IN terminal, use the supplied EON connecting cord to connect the EON CONTROL OUT terminal on the tuner to the EON CONTROL IN terminal on your amplifier. This lets you use the EON function (see page 13) when listening to other components.

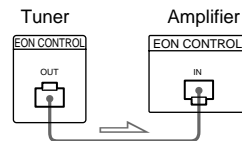

## Mains lead hookup

Connect the mains lead to a wall outlet after completing all of the previous connections.



To a wall outlet

## Selecting the German display

You can select either an English or a German language display. The factory preset language is English. To change the display to German, follow the steps below.

- 1 Press **POWER** to turn off the tuner.
- 2 While pressing down the numeric button 2, press **POWER** to turn on the tuner.

“Deutsch” appears in the display.

### To return to the English display

Repeat this procedure.

“English” appears in the display.

## Storing FM stations automatically (Auto-betical Select)

### (European model only)

With Auto-betical Select you can automatically store up to 30 FM and FM RDS stations in alphabetical order without redundancy. Additionally, Auto-betical Select only stores the stations with the clearest signals. If you want to store FM or AM (MW and LW) stations one by one, see “Presetting radio stations” on page 8 and “Receiving broadcasts” on page 9.

- 1 Press **POWER** to turn on the tuner.
- 2 Turn on the amplifier and select the **TUNER** mode.
- 3 Press **AUTO BETICAL SELECT**. “Yes” and “No” appear in the display.
- 4 Turn **TUNING/SELECT** to select “Yes”.
- 5 Press **AUTO BETICAL SELECT** again. The tuner scans and stores all the FM and FM RDS stations in the broadcast area. For RDS stations, the tuner first checks for stations broadcasting the same programme, then stores only the one with the clearest signal. The selected RDS stations are sorted alphabetically by their Programme Service name, then assigned a two-character preset code. For more details on RDS, see page 12. Regular FM stations are assigned two-character preset codes and stored after the RDS stations.

### Tip

To change the location of, or erase, a preset station, see “Organizing the preset stations” on page 11.

### Notes

- If you move to another area, repeat this procedure to store stations in your new area.
- For details on tuning stored stations, see page 8.
- The FM MODE setting is also stored along with the station.
- If you move the antenna after storing stations using Auto-betical Select, the stored settings may no longer be valid. If this happens, store the stations again.

## Presetting radio stations

This section shows you how to store up to 30 of your favorite FM or AM (FM, MW or LW: European model) stations manually onto preset codes made up of characters (A, B, or C) and numbers (1 - 0), such as A7. You can store up to 10 stations on each of the 3 different letters. You can use these letters to classify stations according to music category or station band.

- 1 Tune in the FM or AM (MW and LW) station you want to store (see “Receiving broadcasts” on page 9).**
- 2 Press MEMORY.**  
“MEMORY” appears along with the lowest vacant code to indicate that the tuner is ready to store the station.
- 3 Press SHIFT repeatedly to select either A, B, or C.**  
The letter you selected appears in the display.
- 4 Press a numeric button (1 - 0).**  
The tuner stores the station at the preset code you specified.
- 5 Repeat steps 1 through 4 to store other stations.**

### Tips

- When you preset an RDS station broadcasting station name information, the station name is automatically stored at the station preset (European model only).
- If you want to label the stations, follow the procedure described in “Naming the preset stations” on page 11.

## Receiving preset stations

- 1 Make sure you’ve hooked up the tuner and preset stations.**  
(See pages 5 - 7 for hookups and page 7 or this page for presetting.)
- 2 Turn on the amplifier and select the TUNER mode.**
- 3 Press POWER to turn on the tuner.**
- 4 Press SHIFT repeatedly to select A, B, or C.**
- 5 Press the preset number you want (1 - 0).**

### To check broadcasts by scanning the preset stations

- 1 Press TUNE MODE repeatedly so that “PRESET” appears in the display.**
- 2 Turn TUNING/SELECT.**

Each time you turn TUNING/SELECT, a preset station is received and the settings (preset code, frequency, and station name, etc.) appear in the display. The signal meter indicates the strength of the broadcast signal.

### Tip

To tune in a non-preset station, see “Receiving broadcasts” on page 9.



## About the menu entry system

This tuner uses a menu entry system which allows you to operate various functions by following messages on the display. Use the following controls for menu operation.

Use	To
MENU	Enter the menu mode.
TUNING/SELECT	Display different items or settings.
ENTER	Select the currently displayed item or setting.
RETURN	Return to a previous stage in the menu mode.

## Customizing the display

You can select the appearance of the display from one of the following four display modes.

**1** Press **MENU**, then turn **TUNING/SELECT** until “Disp-Mode” appears in the display.

**2** Press **ENTER**.

“Select” appears in the display.

**3** Turn **TUNING/SELECT** to select a display mode.

Full Display/Full Brightness → Full Display/Dimmed → Minimal Display/Full Brightness → Minimal Display/Dimmed

**4** Press **ENTER**.

The setting remains in effect until you change it again.

If you press one of the buttons on this unit, the minimal display changes to the full display with the selected brightness. After about 4 seconds, the display returns to the display mode you selected.

## Receiving broadcasts

This tuner lets you enter a station’s frequency directly by using the numeric buttons (Direct Tuning). If you do not know the frequency of the station you want, see “Receiving broadcasts by scanning stations (Automatic Tuning)” on page 10.


Before you begin, make sure you have connected an FM/AM antenna to the tuner as indicated on pages 5 and 6.

**1** Press **BAND** repeatedly to select **FM** or **AM (MW and LW)**.


**2** Press **DIRECT**.

**3** Press the numeric buttons to enter the frequency.

Example 1: FM 102.50 MHz



Example 2: AM 1350 kHz



### To receive other stations

Repeat steps 1 to 3.

#### Tips

- When you tune in AM (MW and LW) stations, adjust the direction of the AM loop antenna for optimum reception.
- If the STEREO indicator remains off, press FM MODE when an FM stereo broadcast is received.
- If you cannot tune in a station and the entered numbers are flashing, make sure you have entered the right frequency. If not, press DIRECT and reenter the frequency you want. If the entered numbers are still flashing, the frequency is not used in your area.
- If you enter a frequency not covered by the tuning interval, the entered value is automatically rounded up or down to the closest covered value.

Tuning intervals for direct tuning are:

FM:

U.S. models: 100 kHz intervals

Other models: 50 kHz intervals

AM:

U.S. models: 10 kHz intervals

Other models: 9 kHz intervals (MW),

1 kHz interval (LW)

continued

## Receiving broadcasts (continued)

### Receiving broadcasts by scanning stations (Automatic Tuning)

With automatic tuning, you can quickly tune in a station without having to know its frequency.

**1** Press **BAND** repeatedly to select either **FM** or **AM (MW and LW)**.

**2** Press **TUNE MODE** so that “**AUTO TUNING**” (“**AUTO**” for **ST-SE370**) appears in the display.

**3** Turn **TUNING/SELECT** slightly and release it when the frequency numbers start changing.

Turn the control to the right for a higher frequency; turn it to the left for a lower frequency.

When the tuner locates a station, it stops automatically. “**TUNED**” appears in the display. The signal meter indicates the strength of the broadcast signal.

**4** Repeat step 3 until you tune in the appropriate station.

To store the station, see “Presetting radio stations” on page 8.

### If you cannot tune in the station you want (Manual Tuning)

With manual tuning, you can search through all stations broadcasting on each band, and tune in stations with extremely weak signals that you might not be able to receive with automatic tuning.

**1** Press **BAND** repeatedly to select **FM** or **AM (MW and LW)**.

**2** Press **TUNE MODE** so that only “**TUNING**” appears in the display (**ST-SE570** only). “**AUTO**” should not appear in the display. For **ST-SE370**, press **TUNE MODE** until nothing appears in the display.

**3** Turn **TUNING/SELECT** until you tune in the station you want.

Turn the control to the right for a higher frequency; turn it to the left for a lower frequency.

The signal meter indicates the strength of the broadcast signal.

#### Note

When you reach the highest or lowest frequency of any band, tuning stops.

## Tips for better FM reception

This tuner has various functions designed for better reception. First, try to receive stations with the standard settings. If the reception is not good, try altering the reception quality to obtain a clear signal. The tuner stores the following adjustments, together with the frequency when you make a station preset.

### Setting the FM mode

Press **FM MODE** a few times to select the reception mode, select either **Auto stereo** (no indication) or “**MONO**”.

- **Auto stereo mode** receives stereo broadcasts with strong signals. Press **FM MODE** a few times so that “**MONO**” disappears.
- “**MONO**” receives stations with weak signals. Stations will be received in monaural but with even less noise.

### Checking the signal strength

You can use the digital signal meter to check the signal strength of FM frequencies. The display range is from 16 to 70 dB (1  $\mu$ V of radio frequency voltage = 0 dB). To obtain a signal to noise ratio sufficient for receiving a stereo broadcast, we recommend a reading greater than 50 dB. (You can also change the **FM MODE** while using the signal meter to determine the best reception.)

**1** Tune in an **FM** station.

**2** Press **DISPLAY** repeatedly to display the digital signal meter.

**3** Rotate the **FM** antenna to obtain the strongest signal.

## Naming the preset stations

You can assign a name up to 5 characters long to each preset station except FM RDS stations. When the station is tuned in, the station name will appear instead of the frequency.

### 1 Press CHARACTER.

The cursor flashes in the display.

### 2 Turn TUNING/SELECT to select a character.

### 3 When the character you want appears, press CHARACTER to move the cursor into position for the next character.

#### If you make a mistake

Press CHARACTER repeatedly until the character you want to change flashes (every time you press CHARACTER, the next character flashes). Then turn TUNING/SELECT to select a new character.

### 4 Repeat steps 2 and 3 until the station name you want appears in the display.

### 5 Press MEMORY.

“MEMORY” appears along with the lowest vacant code to indicate that the tuner is ready to store the station.

### 6 Press SHIFT and one of the preset buttons to specify the preset where you want to store the station name.

#### Note

The display returns to normal display mode if you stop assigning names for more than 8 seconds. If this happens, start again from the beginning.

#### Tip

To see the frequency of the displayed station name, press DISPLAY repeatedly.

## Organizing the preset stations

This tuner makes it easy to arrange preset stations in the order you prefer. You can arrange all the preset stations automatically, according to alphabetical order, signal strength, country code, or tuner band, or you can use the Move and Erase functions to move and erase specific preset stations.

### 1 Press MENU.

### 2 Turn TUNING/SELECT until “Edit” appears in the display and press ENTER.

If no stations have been stored as presets, “No Preset” appears in the display.

### 3 Turn TUNING/SELECT to select one of the following sorting methods:

Select	To
Move	Change the location of a specific preset (see page 12).
Erase	Erase a specific preset (see page 12).
Alphabet	Sort preset stations in alphabetical order according to their preset names. Stations without preset names are arranged by frequency, from low to high.
Strength	Sort preset stations in order of their signal strength (FM stations only). AM (MW and LW) stations are arranged by frequency.
Country*	Sort FM RDS stations with PI** information alphabetically by country. Other stations are arranged by frequency.
Band	Sort preset stations in order of their frequency band (FM - AM (MW - LW)).

\* European model only.

\*\* Programme Identification (See page 13).

### 4 Press ENTER.

The tuner sorts the stations, then returns to normal tuning mode and receives preset station A1.

#### Note

Some countries use the same country code, and the stations from these counties may be arranged together.

continued

## Organizing the preset stations (continued)

### Moving preset station


You can also move a specific preset station.

- 1 Follow steps 1 through 3 in “Organizing the preset stations” and select “Move” from the Edit menu, then press ENTER.
- 2 Turn TUNING/SELECT so that the preset code you want to move appears in the display and press ENTER.
- 3 Turn TUNING/SELECT to select the new location for the preset code and press ENTER.

The preset station you selected is moved to the new location and the other preset stations in that group (“A” for example) shift backwards to make room for the new preset.

Example: If you move A4 to A1.

Preset	A1	A2	A3	A4	A5	A6	A7	A8
Frequency	89.5	94.5	96.5	98.0	100.5	103.0	104.5	106.0

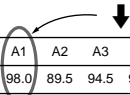

Preset	A1	A2	A3	A4	A5	A6	A7	A8
Frequency	98.0	89.5	94.5	96.5	100.5	103.0	104.5	106.0

### Erasing preset stations


You can erase preset stations one by one.

- 1 Follow steps 1 through 3 in “Organizing the preset stations” and select “Erase” from the Edit menu, then press ENTER.
- 2 Turn TUNING/SELECT so that the preset code you want to erase appears in the display and press ENTER.

The preset station you selected is erased from the preset memory and the other preset stations in that group (“A” for example) shift forward to fill in the blank space.

Example: If you erase A1.

Preset	A1	A2	A3	A4	A5	A6	A7	A8
Frequency	89.5	94.5	96.5	98.0	100.5	103.0	104.5	106.0



Preset	A1	A2	A3	A4	A5	A6	A7	A8
Frequency	94.5	96.5	98.0	100.5	103.0	104.5	106.0	

### Tip

If you want to erase all the preset stations:

- 1 Turn off the tuner.
- 2 While pressing down the numeric button 5 and AUTO BETICAL SELECT (ST-SE570) or BAND (ST-SE370), press POWER to turn on the tuner.

## Using the Radio Data System (RDS)

(European model only)

### What you can do with RDS

The Radio Data System (RDS) is a broadcasting service that allows radio stations to send additional information along with the regular radio programme signal. This tuner offers you three convenient RDS features: Displaying the RDS information; Monitoring traffic, news, or information programmes; and Locating a station by programme type. RDS is available only on FM stations.\*

### Note

RDS may not work properly if the station you tuned to is not transmitting the RDS signal properly or if the signal strength is weak.

\* Not all FM stations provide RDS service, nor do they provide the same types of services. If you are not familiar with the RDS system, check with your local radio stations for details on RDS services in your area.

### Receiving RDS broadcasts

Simply select a station from the FM band.

When you tune in a station that provides RDS services, the RDS indicator and the station name appears in the display.

## Displaying the RDS information

Press **DISPLAY** repeatedly until the information you want is displayed.

Information displayed	You can
Station Name*	Locate each station by name (e.g., WDR) instead of frequency.
Frequency*	Locate each station by frequency.
Clock Time (24 hour system)	Display the current time.
Programme Type	Locate a specific type of programme being broadcast. (See page 14 for the types of programmes you can select.)
Radio Text	Display the text messages sent by the RDS station.
Programme Identification	Determine each broadcast's country of origin.
Digital signal meter*	Check the signal strength of FM frequencies. (See page 10 for details.)

\* This information also appears for non-RDS FM stations.

### Notes

- If there is an emergency announcement by governmental authorities, "ALARM" flashes in the display.
- If a station is not providing a particular RDS service, "NO..." (such as "NO PTY") appears in the display.
- When a station broadcasts radio text data, the display shows the data at the rate it is sent from the station. The display speed changes in relation to the speed at which the data is sent.

## Monitoring traffic, news, or information programmes (EON)

(ST-SE570 only)

Enhanced Other Networks (EON) allows the tuner to automatically switch to a station broadcasting traffic, news, or information. After the programme ends, the tuner switches back to the station you were listening to. To use this function, be sure to store the stations beforehand.

### To monitor traffic programmes

**1** Tune to a preset FM RDS station so that the RDS TP, or RDS TP EON indicators light in the display.

**2** Press EON TA so that "TA" appears in the display.

Each time you press EON TA, the display changes as follows:

TA (Traffic Announcement) ↔ OFF

When the tuner automatically tunes in a traffic programme, the TA indicator flashes. If you do not want to listen to the entire programme, press EON TA to switch back to the original station.

### To monitor news and/or information programmes

**1** Tune to a preset FM RDS station so that the RDS TP or RDS TP EON indicators light in the display.

**2** Press EON NEWS/INFO so that either "NEWS", "INFO", or "NEWS/INFO" appear in the display.

Each time you press EON NEWS/INFO, the display changes cyclically as follows:

NEWS → INFO → NEWS/INFO → OFF

When the tuner automatically tunes in a news or information programme, the respective indicator flashes. If you do not want to listen to the entire programme, press EON NEWS/INFO to switch back to the original station.

continued

## Using the Radio Data System (RDS) (continued)

### To stop monitoring the programme

Press EON TA or EON NEWS/INFO while the tuner is in the respective EON standby mode and the indicator goes off.

#### Notes

- If you tune in an AM (MW and LW) station or an FM station which does not provide the RDS service, the selected indicator (TA, NEWS, INFO, or NEWS/INFO) goes off and the tuner does not standby for EON stations.
- “Weak Signal” appears when the selected station has a weak signal. “Return” appears when the tuner is trying to retune a station with a weak signal.
- Turn off the EON feature when you want to record a programme without interruptions, especially when you want to do timer recording.
- “No EON” appears in the display if you select an EON programme before tuning to an RDS station.
- If you make EON CONTROL connections to a compatible Sony amplifier, the amplifier automatically switches the function mode to TUNER whenever the tuner receives a programme you are monitoring.

## Locating traffic programmes (TA Search)

You can have the tuner locate stations currently broadcasting traffic programme from among the RDS stations stored in the tuner’s preset memory.

### 1 Press MENU.

### 2 Turn TUNING/SELECT until “Traffic” appears in the display and press ENTER.

The unit enters search mode (“Search” and “Traffic” appear alternately in the display).

When the tuner finds a traffic announcement, it stops searching. The tuner receives each station for 8 seconds.

### 3 Press ENTER when the tuner receives the station you want to listen to that programme.

## Locating a station by programme type (PTY)

You can locate a station you want by selecting a programme type. The tuner tunes in the type of programmes currently being broadcast from the RDS stations stored in the tuner’s preset memory.

### 1 Press PTY.

### 2 Turn TUNING/SELECT to select the programme type you want.

See the following table for the programme types you can select.

Programme type	What you hear
(Current) Affairs	Topical programmes that expand on current news
Alarm	Emergency broadcasts
Alarm Test	Used only for dynamic switching
Children (’s programmes)	Programmes for the young
Country Music	Country music programmes
Culture	Programmes about national or regional culture, such as language and societal concerns
Documentary	Investigative features
Drama	Radio plays and serials
Education	Educational programmes, such as “how-to” and advice programmes
Finance	Stock market reports and trading, etc.
Folk Music	Folk music programmes
Information	Programmes offering information on a wide spectrum of subjects, including consumer affairs and medical advice
Jazz Music	Jazz programmes

Programme type	What you hear
Leisure	Programmes on recreational activities such as gardening, fishing, cooking, etc.
L (ight). Classical	Classical music, such as instrumental, vocal, and choral works
Easy Music	Easy Listening (middle of the road music)
National Music	Programmes featuring the popular music of the country or region
News	News programmes
Oldies Music	Programmes featuring oldies music
Other Music	Music that does not fit into any of the above categories, such as Rhythm & Blues and Reggae
Phone In	Programmes where members of the public express their views by phone or in a public forum
Pop Music	Popular music programmes
PTY undefined	Any programmes not defined above
Religion	Programmes of religious content
Rock Music	Rock music programmes
Science	Programmes about the natural sciences and technology
Social A (ffairs)	Programmes about people and the things that affect them
Sport	Sports programmes
S (erious). Classical	Performances of major orchestras, chamber music, opera, etc.
Travel	Programmes about travel. Not for announcements that are located by TP/TA
Varied	Other types of programmes such as, celebrity interviews, panel games, and comedy
Weather	Weather information

### 3 Press PTY.

The tuner starts searching the preset RDS stations for the programme (“Search” and the programme type are displayed alternately).

When the tuner finds the programme you are looking for, it stops searching. The preset stations currently broadcasting the selected programme type are indicated and the tuner receives each station for 8 seconds.

### 4 Press PTY when the tuner receives the station you want to listen to that programme.

### Precautions

#### On safety

- Should any liquid or solid object fall into the unit, unplug the unit and have the unit checked by qualified personnel before operating it any further.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

#### On power sources

- Before operating the unit, be sure that the operating voltage of your unit is identical with that of your local power supply.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- AC power cord must be changed only at the qualified service shop.

#### On placement

- Place the unit in a location with adequate ventilation to prevent heat buildup and prolong the life of its components.
- Do not place the unit near heat sources, or in a place subject to direct sunlight, excessive dust or mechanical shock.
- Do not place anything on top of the cabinet which might block the ventilation holes and cause malfunctions.
- Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

#### On cleaning the cabinet

Clean the cabinet, panels and controls with a soft cloth lightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

#### On repacking

Do not throw away the carton and the packing material. This makes an ideal container when transporting the unit. When shipping the unit, repack it as it was packed at the factory.

If you have any question or problem concerning your unit that is not covered in this manual, please consult your nearest Sony dealer.

### Troubleshooting

If you experience any of the following difficulties while using the tuner, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

---

#### There is no sound.

- Connect the aerials.
- Set the source setting on the amplifier to TUNER.

---

#### You cannot tune in a frequency.

- Adjust the position of the aerial.
- Connect an external aerial for FM broadcasts.
- Preset the stations again if you have moved.

---

#### There is severe hum and/or background noise.

- Adjust the position or direction of the aerial.
- Tune to a correct frequency.
- Connect an external aerial for FM broadcasts.
- Move the tuner away from the source of the noise.

---

#### RDS is not working (European model only).

- Make sure that you tune to an FM station.
- Select a stronger FM station.

---

#### “No Preset” appears in the display.

- If the mains lead is disconnected from the wall outlet for more than one month, the memory is erased. Preset stations again.

---

#### The station was interrupted by another station / The tuner automatically starts searching stations (ST-SE570 only).

- The EON function is working. Turn off EON when you do not want the current programme interrupted.

---

#### The appropriate display or information does not appear.

- Turn off the tuner. Press down the numeric button 5 and AUTO BETICAL SELECT (ST-SE570) or BAND (ST-SE370), then press POWER to turn the tuner back on. This empties any frequencies stored in the preset memory and returns the display to the default language (English).
  - Contact the radio station and find out whether or not they actually provide the service in question. If so, the service may be temporarily out of order.
-



# Specifications

## FM tuner section

<b>Frequency range</b>	87.5 - 108.0 MHz (U.S. models: 100 kHz step, other models: 50 kHz step)
<b>Aerial terminals</b>	75 $\Omega$ , unbalanced U.S. models: F-TYPE CONNECTOR, other models: IEC-male
<b>Intermediate frequency</b>	10.7 MHz
<b>Sensitivity</b>	at 26 dB quieting (mono) 10.3 dBf, 0.9 $\mu\text{V}/75 \Omega$ at 46 dB quieting (stereo) 38.5 dBf, 23 $\mu\text{V}/75 \Omega$
<b>Usable sensitivity (IHF)</b>	10.3 dBf, 0.9 $\mu\text{V}/75 \Omega$
<b>S/N</b>	at 40 kHz deviation 74 dB (mono), 69 dB (stereo)
<b>Harmonic distortion</b>	0.09% (mono), 0.18% (stereo)
<b>Frequency response</b>	30 Hz - 15 kHz (+0.5/-1.0 dB)
<b>Separation</b>	45 dB at 1 kHz
<b>Selectivity</b>	at 400 kHz 85 dB at 300 kHz 70 dB
<b>Output</b>	at 40 kHz deviation 600 mV

## AM tuner section

### Frequency range

MW:	522 - 1,611 kHz (9 kHz step)
ST-SE570	
ST-SE370	
U.S. models:	530 - 1,710 kHz (10 kHz step*)
Singaporean and Australian models:	531 - 1,710 kHz (9 kHz step)
Other models:	531 - 1,602 kHz (9 kHz step)
LW:	144 - 288 kHz (1 kHz step)

### Intermediate frequency

450 kHz

### Usable Sensitivity

(with AM loop aerial)

MW:	200 $\mu\text{V}/\text{m}$
LW:	700 $\mu\text{V}/\text{m}$

### Signal-to-noise ratio

MW:	54 dB (50 mV/m, 999 kHz)
LW:	50 dB (50 mV/m, 216 kHz)

<b>Harmonic distortion</b>	0.3% (50 mV/m, 400 Hz)
----------------------------	---------------------------

<b>Selectivity</b>	50 dB
--------------------	-------

## General

### Power requirements

U.S. models:	120 V AC, 60 Hz
Australian models:	230 V AC, 50 Hz
Other models:	230 V AC, 50/60 Hz

<b>Power consumption</b>	10 W
--------------------------	------

<b>Dimensions</b>	430 x 83 x 290 mm (w/h/d)
-------------------	------------------------------

<b>Weight</b>	2.5 kg
---------------	--------

### Supplied accessories

Audio cord (1)  
AM loop antenna (1)  
FM wire antenna (1)  
EON connecting cord (ST-SE570 only, 1)

\* (U.S. models only.) You can change the AM tuning interval to 9 kHz. After tuning in any AM station, turn off the tuner. Hold down the numeric button 9 and press the POWER button. To reset the scale to 10 kHz, hold down the numeric button 0 and press the POWER button to turn on the tuner. All preset stations will be erased when you change the tuning interval.

Design and specifications are subject to change without notice.





